


iBot® by APS

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*TRIMMING/ DRILLING MAY BE REQUIRED FOR WIRING

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	Х
12mm	56-58	Х
14mm	92-94	Х

PART#: PB-A058

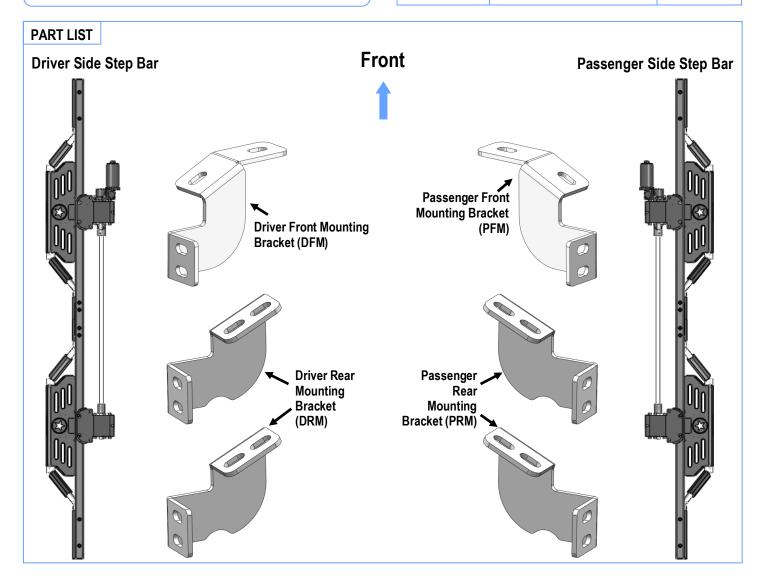

Customer Support: info@ibotauto.com

Bot®




	Hardware Package A (For Brackets Installation)				
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-30 Hex Bolts	3#	12	M8 Lock Washers
2#	12	M8 Large Flat Washers			
1#		2#		3#	

Hardware Package B (For Step Bars Installation)					
ltem	QTY	Description	Item	QTY	Description
1#	12	M8X60 Decorative Bolts	3#	12	M8 Nylon Flange Lock Nuts
2#	12	M8 Large Flat Washers			
1#			2#	3#	

Electrical Accessories					
ltem	QTY	Description	Item	QTY	Description
1#	1	Main harness with wire taps	3#	15	Zip Ties
2#	1	ECU (Electronic Control Unit)			
1 # 2 # 3#					

STEP 1


Start installation on the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs) if equipped, **(Fig 1)**. This will be the mounting location for the Driver Front Mounting Bracket.

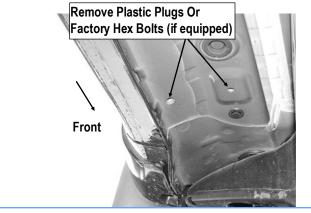

(Fig 1) Driver Side Front Mounting Location

STEP 2


Select the Driver Front Mounting Bracket (**DFM**). Attach the Bracket to the vehicle using the included (2) M8X1.25-30 Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (**Fig 2**). Do not fully tighten hardware at this time.

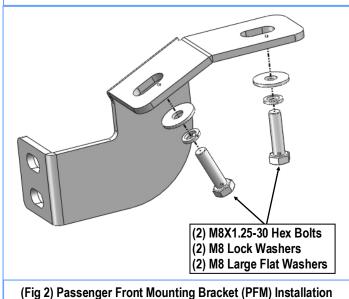


STEP 3

Move to the Driver Side Center and Rear Mounting Locations, (Fig 3). Repeat Steps 2—3 to install the Driver Center & Rear Mounting Brackets, (Fig 4).

Note: Driver Center Mounting Bracket and Rear Mounting Bracket are Universal.

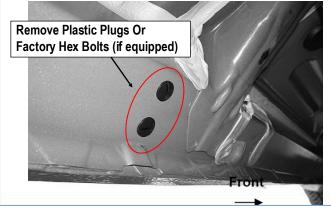

(Fig 3) Driver Side Center/Rear Mounting Locations (Example)

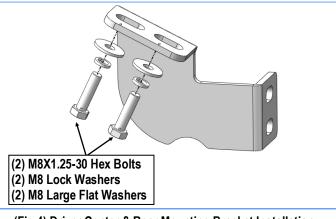

(Fig 4) Driver Center & Rear Mounting Bracket Installation


Customer Support: info@ibotauto.com




STEP 4

Start from the engine compartment by opening the front hood of the vehicle. Locate the Battery and its terminals (positive/negative). Remove the 25A fuse from the fuse box that comes with the main harness. (Fig 6).

*WARNING: Keeping the fuse connected to the fuse box may result in electrical sparks and risk of shorting when working with the battery.

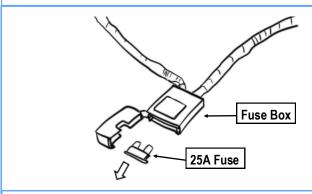

(Fig 6) 25A Fuse and Fuse Box

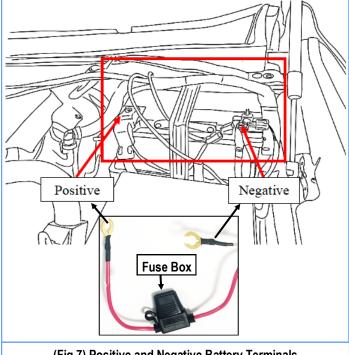


(Fig 7) Positive and Negative Battery Terminals

STEP 5

Connect the positive power lead on main harness to the positive battery terminal. Connect the negative lead to the negative battery terminal. (Fig 7). Make sure both power leads are fully secured. Connect the ECU to the main harness. (Fig 8)

NOTE: Battery is on Driver Side of engine compartment.

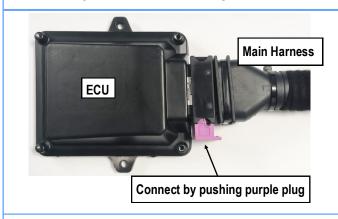

(Fig 8) ECU AND Main harness Connection

STEP 6

Route the main harness around the battery, up along the rear of the engine compartment. The longer Driver-side branch of the main harness must route down the backside, against the fire wall, and down past the steering column towards the vehicle frame. Be sure to avoid contact with the steering column. (Fig 9)

Route the shorter (marked "Passenger-side") leg of the harness down the Passenger-side wheel well. **Be sure to avoid contact with any moving or hot engine components.** Attach and secure the main harness with supplied Zip ties.

Be sure the harness avoids contact with the suspension and steering column.

ECU should be secured near battery or any space away from the direct heat of the engine.

Customer Support: info@ibotauto.com

iBot ⁶



STEP 7

Inside the vehicle cabin, remove the driver-side front kick panel and bottom door sill panel. Peel back the carpet to access the hole with a removeable grommet. This is the hole where the signal wires from the Main Harness will need to feed through. (Fig 10).




Customer Support: info@ibotauto.com



STEP 8

On the underside of the driver side, locate and remove the floor grommet in the floor panel above the frame. The grommet will be in a tight space above the frame and OE conduit. Poke a hole through the grommet and thread the two signal wires through and up into the vehicle cabin. (Fig 11)

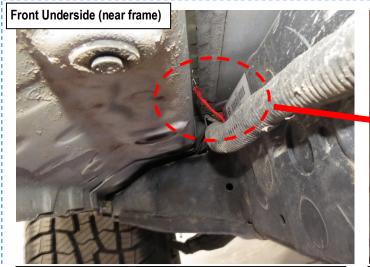

*NOTE: There are two holes the wiring harness must pass through, 1 inside cabin and 1 on underside belly. Each has a rubber grommet (total 2 grommets). The 2 holes are not always aligned; thus, some finesse and fishing may be needed.




*NOTE: Red wires are for routing demonstration purposes only.

(Fig 11)

STEP 9

Locate the white OEM CAN Junction connector under the steering wheel, behind the kick panel. Be sure vehicle is not powered on. Locate the large bundled harness of wires on the backside of the junction (top of the stack of connectors). There should be several pairs of twisted colored wires in the wire harness bundle. (Fig 12)

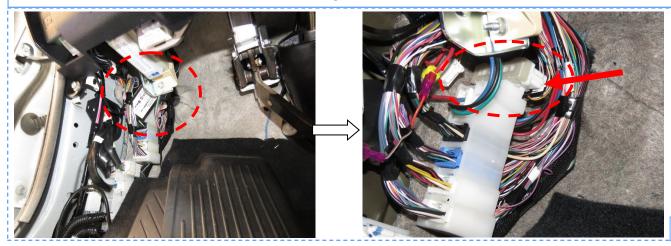



(Fig 12)

Customer Support: info@ibotauto.com




On the white connector, identify the Teal and White wires. Connect the High and Low wires from the main harness using the supplied wire taps. After successfully connecting the wires, return the connector back into its place and check that it is secure. (Fig 13)

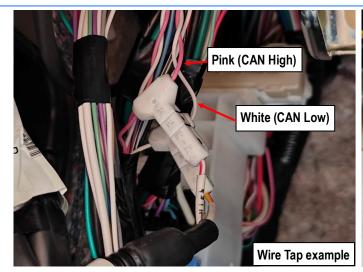

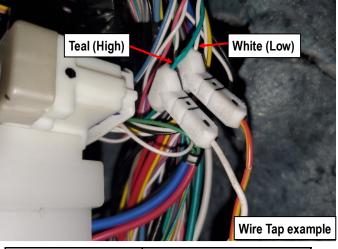

NOTE: On some vehicle trims, the colors of the wires may be different. In these cases, the white wire of the twisted pair is always "CAN Low". The colored wire is "CAN High".

Factory CAN Wire	Main harness wire color				
Teal/ Pink (High)	Purple (High)				
White (Low)	Grey (Low)				

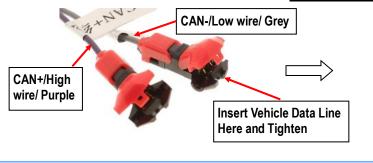




(Fig 13)

STEP 10

Move to the installation of Step Bars. select and attach the Driver Side Power Step Board onto the Mounting Brackets with (6) M8 Large Flat Washers, (6) M8 Nylon Flange Lock Nuts and (6) M8 Decretive Bolts, **(Figs 14&15)**. Properly level and adjust the Step Bar and fully tighten all hardware.

Repeat for the other side Power Step Installation.


Bot ®

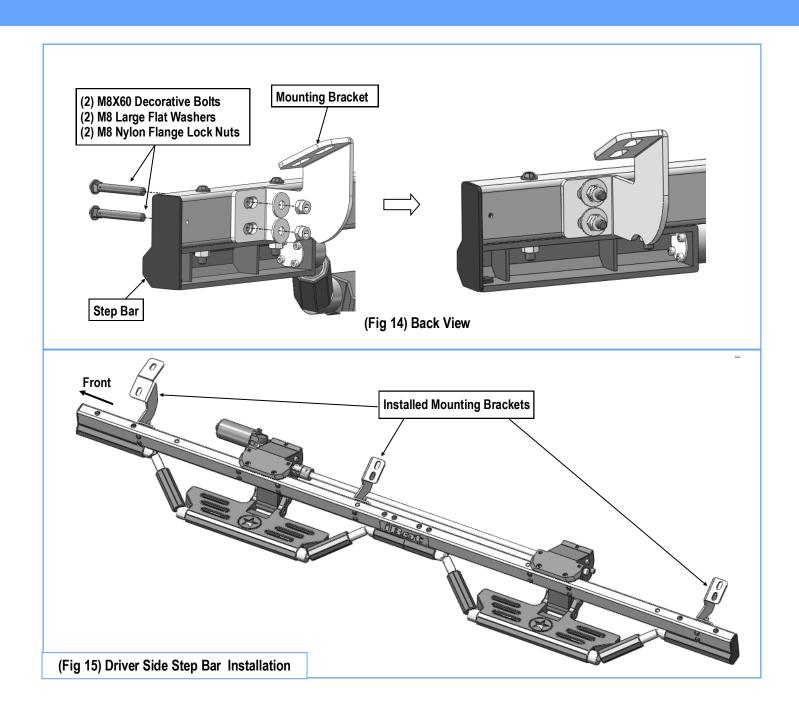


iBot [©]

STEP 11

Connect the harnesses on the Driver Power Step Board and Passenger Power Step Board to the main harness.

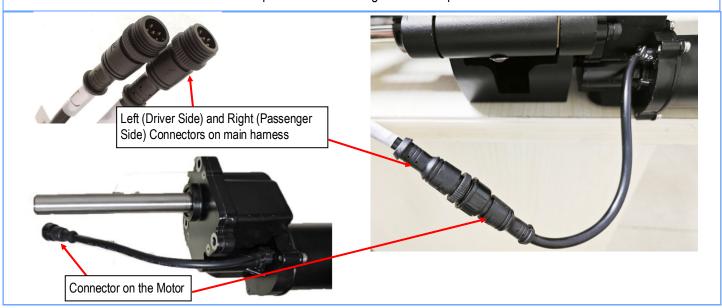

STEP 12

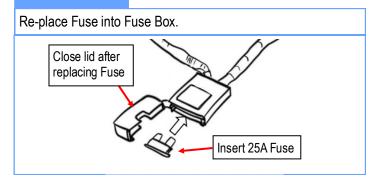

STEP 13

Once the Step Bars are Installed, perform a function check by opening and closing doors several times, make sure the pedals deploy and retract normally. After cycling the step, tighten all hardware on the board and brackets.

Installation complete.

Note: If pedal does not move, try to flip the CAN Signal High and Low wires.

Attention

- Do periodic inspections to the installation to make sure that all hardware is secure and tight.
- In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.
- During severe winter conditions, the electric running board may become frozen and unable to function properly. In such situations, or under other unfavorable conditions that may affect its normal operation, it is recommended to remove the fuse to disconnect the power supply, temporarily disabling the electric running board to prevent potential damage.

Customer Support: info@ibotauto.com