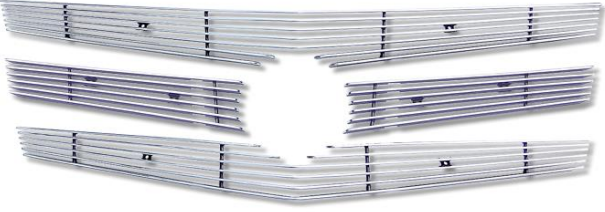
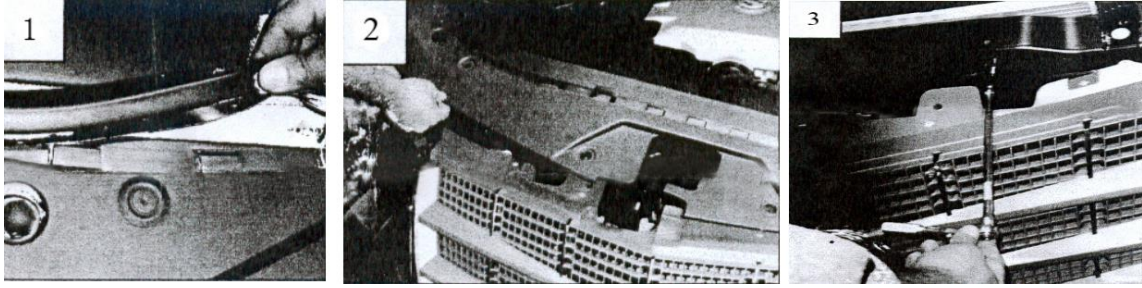



| | | | | | | | | |
|-------|--------------|-------------|--|--|--|--|--|--|
| Part# | GR01FEB57A/H | Application | For 2008-2011 Cadillac CTS (Not For CTS-V) | | | | | |
|-------|--------------|-------------|--|--|--|--|--|--|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-------------|------|-------------------|-----|-------------|
| | 1 | Billet Grille | 3 | Aluminum | 3 | Truss Head Screws | 8 | 6-32×1.5" |
| | 2 | Toggle Nuts | 8 | 6# | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Remove the rubber hood seal on the front side of the motor cover [1]. Unscrew the plastic clips and remove the plastic radiator cover over the grille [2]. Remove the two 10mm bolts along the top of the grille going into the core support [3]. |  |
| 3 | The top corners of the grille and bumper cover are secured by a plastic pop clip; remove both. Pull grille forward to gain access behind grille. Factory grille is retained by (10) metal clips . Use a screwdriver to release each pressure clip. Push the center bottom of grille towards the core support and pull the top outward to release the grille center . Set the factory grille aside. | |
| 4 | Center the grille into the grille opening. Place screws through the welded aluminum tabs on the grille, and attach a toggle nut on the end of each bolt. | |
| 5 | Hold the billet insert up to the opening of the factory shell, make sure that it is centered in the grille shell, and push in the toggle nut past the factory grille honeycomb. | |
| 6 | Turn the toggle nut so that it is vertical, and tighten. But not over-tighten! | |
| 7 | Re-install the radiator cover and hood seal. | |
| 8 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!