





Part#	GR01GAC1 1T	Application	For 2013-2014 Cadillac ATS Logo Show
-------	----------------	-------------	--------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Lock Nut	5	6-32
	2	Flat Tab	5	/				

Install Notes: Overlay Replacement Drill Cut

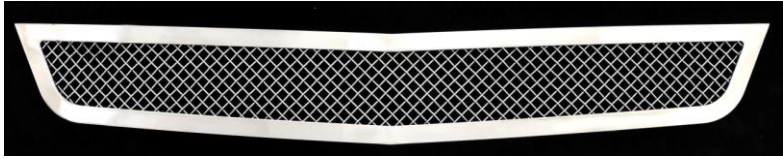
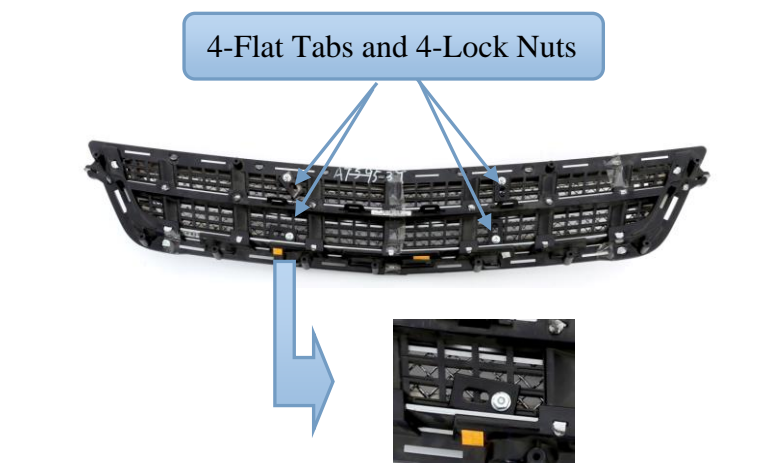

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the factory grille from vehicle will be much easy for installing. Option: Pop hood, remove the black plastic cover (on top of factory grille / front panel) from vehicle. This will allow access to the rear of the OEM grille to install the mesh grille.	
3	Center the Mesh grille onto the factory grille. Be sure the threaded studs welded on the rear of the mesh grille, are through the OEM grille shell.	
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	
5	Secure billet grille using the lock nuts and flat tabs from the back side of the factory grille.	 Lock Nut & Flat Tab
6	Make sure the grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR01GAC1 1T	Application	2013-2014 Cadillac ATS Lower Bumper
-------	----------------	-------------	-------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Lock Nut	4	6-32
	2	Flat Tab	4	/				

Install Notes: Overlay Replacement Drill Cut


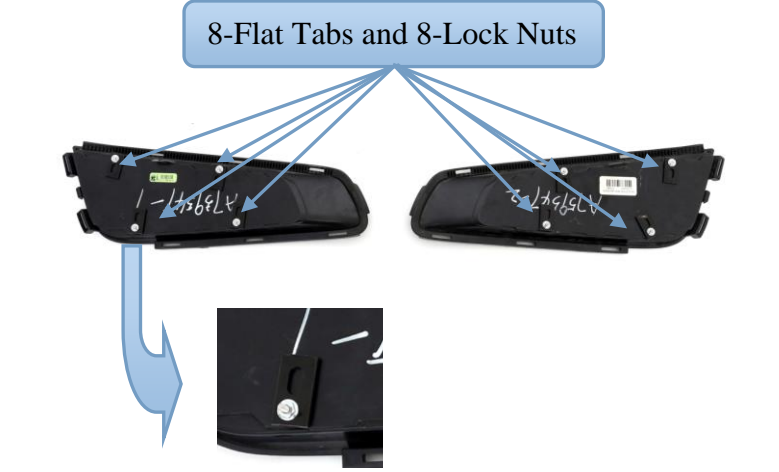

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	You may need to remove the black plastic cover (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Secure the stud to the threaded holes on the rear of the grille.	N/A
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	N/A
5	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	N/A
7	Reinstall the black plastic cover which was removed in step 1.	N/A
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR01GAC1 1T	Application	2013-2014 Cadillac ATS Fog light Cover
-------	----------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Lock Nut	8	6-32
	2	Flat Tab	8	/				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Carefully remove the black plastic cover from front bumper, This will allow you easily to install the billet grille on the fog light cover.	N/A
3	Center the Mesh Grille on the fog light cover and then you need mark and drill eight holes. Secure the stud to the threaded holes on the rear of the grille. Be sure the bolts are through the fog light cover.	N/A
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	N/A
5	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	N/A
7	Reinstall the black plastic cover which was removed in step 1.	N/A
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!