

Part#	GR01GEI28T&H	Application	For 2010-2015 Cadillac SRX				
-------	--------------	-------------	----------------------------	--	--	--	--


Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	Logo Plate	1	
	2	Top Plate	1	/	6	Christmas tree Clip	6	
	3	Lock Nut	10	6-32	7	Washer	4	6-32
	4	Zip Tie	2	/				

Install Notes: Overlay Replacement Drill Cut

Installation



1. Identify the grille & hardware with parts list.

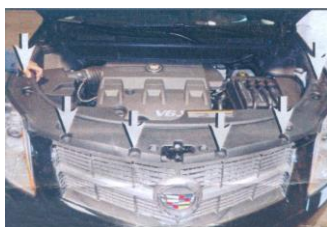

2. Remove 6 clips along the top of the factory grille.



3. Lift the plastic flap and move it out the way.



4. Remove 11 bolts (3 on each side and 3 in the center).



5. Unclip the hose that is on the driver side.



6. Remove a clip on each side of the factory grille shell.



7. Remove the top plate (lift the grill upwards to remove the plate).


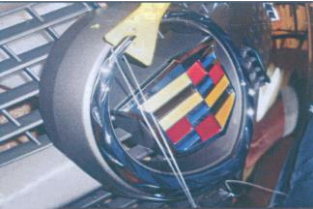
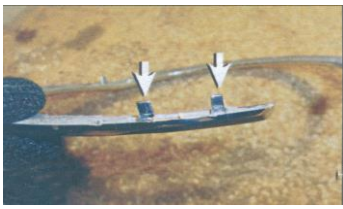









8. There will be a clip on the side behind the factory grille, unclip it.



9. Unclip clips from around the factory grill. (push grille forward to unclip carefully)

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR01GEI28T&H	Application	For 2010-2015 Cadillac SRX
 <p>10. Note: There will be a hose depending on your vehicle make that will run along the bottom of the factory grille. Unclip to move hose. Use the zip ties to tie the hose to the metal rods in front of the radiator.</p>	 <p>11. With a fishing line or anything thin, Remove the badge from the grille carefully.</p>	 <p>12. Break off the tabs that are on the badge.</p>	
 <p>13. Place the logo plate on the mesh grille. From behind the grille, place the 6-32 washers and 6-32 nylon lock nuts on the threaded studs.</p>	 <p>14. Place double-sided tape on the Cadillac Badges and Stick them onto the logo plate.</p>	 <p>15. Place the top plate on the mesh grille and thread 6-32 lock nuts.</p>	
 <p>16. Place the mesh grille onto the factory grille shell.</p>	 <p>17. Place Christmas Tree Clips on the brackets along the bottom of the mesh grille.</p>	 <p>18. Re-insert the factory top plate underneath the top plate on the mesh grille shown in Fig.6.</p>	
 <p>19. Re-install the factory bolts on the top plate.</p>	<p>20. Installation completed!!!</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!