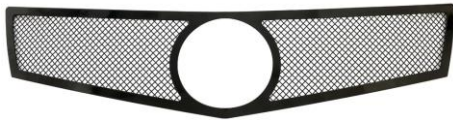

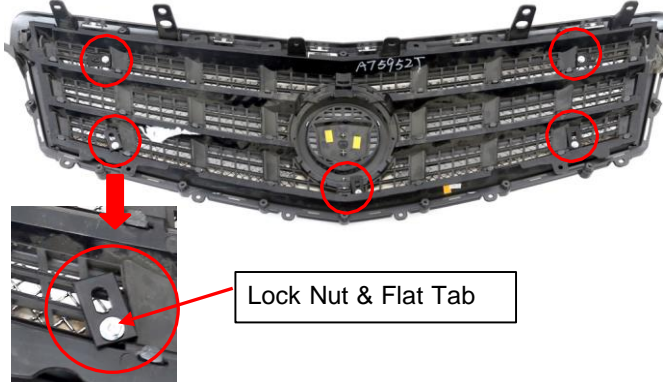





PATENT PRODUCT

Grille Installation Instruction

Rev. 200701

Part#	GR01GEI52H		Application	13-14 Cadillac ATS Logo Show (Main Upper)				
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1		3	Flat Tab	5	
	2	Lock Nut	5					
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Remove the factory grille from vehicle will be much easy for installing. Option: Pop hood, remove the black plastic cover (on top of factory grille / front panel) from vehicle. This will allow access to the rear of the OEM grille to install the mesh grille.							
3	Center the Mesh grille onto the factory grille. Be sure the threaded studs welded on the rear of the mesh grille, are through the OEM grille shell.							
4	Secure billet grille using the lock nuts and flat tabs from the back side of the factory grille.				 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-top: 10px;">Lock Nut & Flat Tab</div>			
5	Make sure the mesh grille is centered and tighten the fasteners.							
6	Reinstall the factory grille with mesh grille onto the vehicle, which was removed in step 2							
7	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!