



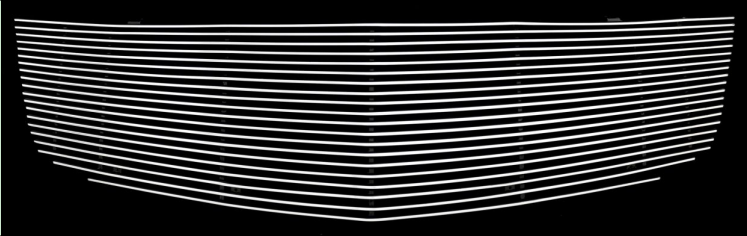
# Grille Installation Instruction

Rev. 150116

|       |            |             |  |
|-------|------------|-------------|--|
| Part# | GR01HFG64A | Application | 06~10 Cadillac DTS – Main Upper Billet Grill |
|-------|------------|-------------|--|

| Parts List | Item | Part Name     | QTY | Description | Item | Part Name            | QTY | Description    |
|------------|------|---------------|-----|-------------|------|----------------------|-----|----------------|
|            | 1    | Billet Grille | 1   | Aluminum    | 4    | Fully Threaded Studs | 4   | 10-24 × 1 1/2" |
|            | 2    | K-Lock Nuts   | 6   | 10-24       | 5    | Extension Brackets   | 2   |                |
|            | 3    | Hook Brackets | 4   |             | 6    | Allen Bolts          | 2   | 10-24 × 1"     |

Install Notes: Overlay  Replacement  Drill  Cut

| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the grille & hardware with parts list.   |  |
| 2    | Remove the factory grille shell from the vehicle. Save the factory mounting hardware as some will be reused later.  | N/A  |
| 3    | Install the fully threaded studs into the threaded tabs on the backside of the billet grille.   | N/A  |
| 4    | Attach the powder coated extension brackets the tabs on the top of the billet grille using the Allen head bolts and k-lock nuts. Do not fully tighten at this time. | N/A  |
| 5    | Center the billet grille into the factory grille shell opening and hold in place.   | N/A  |
| 6    | Place the hook brackets over the fully threaded studs and hook over the lip on the backside of the opening. Hold the brackets in place using the k-lock nuts.       | N/A  |
| 7    | Line up the upper extension brackets with the factory mounting holes and attach to the vehicle using the factory hardware.  | N/A  |
| 8    | Make sure that the billet grille is centered to your liking and secure all hardware.  | N/A  |
| 9    | Installation completed!!!   | N/A  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!