



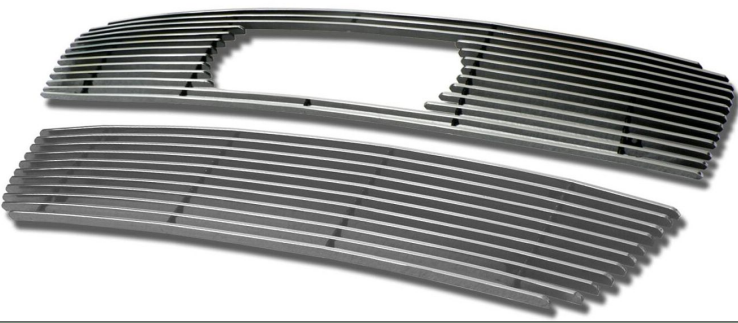
# Grille Installation Instruction

Rev. 150116

Part#	GR02FEE27H	Application	07~up Audi Q7 - Bolton Billet Grille
-------	------------	-------------	--------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	3	Truss Head Tapping Screws	8	8×2"
	2	Flat Tabs	8		4	U- Clip Nuts	8	8#

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Place one screw through each of the welded tabs on the billet grille.	N/A
4	Place a U-clip nut over each of the holes on the single hole flat tab.	N/A
5	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	N/A
6	Where the screws come through the grille shell, place a tab in align with the screw and tighten. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center. DO NOT OVER TIGHTEN SCREWS.	N/A
7	Repeat steps 4 and 5 for the bottom grille	N/A
8	Reinstall the black plastic cover which was removed in step 2.	N/A
9	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!