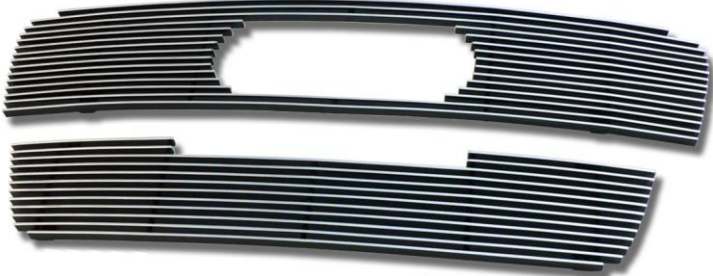
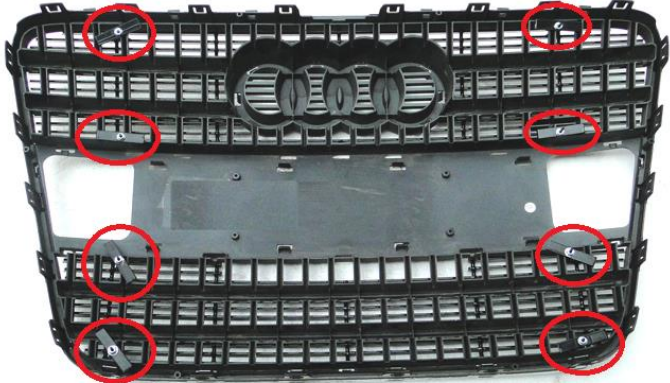


Part#	GR02FEE47A/H	Application	<b>For 2007-2012 Audi Q7 With Cut For License Plate</b>
-------	--------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	4	Nylon Lock Nuts	8	6-32
	2	Flat Washers	8	10#	5	Machine Screws	8	6-32 × 1.5"
	3	L Brackets	8	1/2 × 1/2				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood; test fit the billet grilles onto the vehicle. Remove 2 plastic fasteners in each corner on top of the grille. Remove the radiator cover; use a slotted screwdriver to depress the clips that secure it in place. Remove 3 Torx screws from behind the grille (one in the center and one on each end). Remove 6 additional Torx from behind the grille. Remove the factory grille; release the pressure clips from behind. Start at the top and continue to release them around to the bottom.	
3	Center the upper grille in place. From the front, insert a screw into each tab. Secure an L bracket, washer and nut onto each screw. Wrap the brackets around the vertical plastic bars in the grille. Tighten the hardware until the grille is held firmly in place. Repeat this process on the lower grille.	
4	Reinstall the factory grille which was removed in step 2.	
5	Installation completed.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!