



PATENT PRODUCT

Grille Installation Instruction


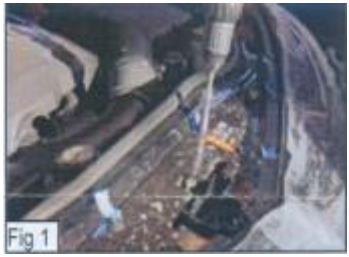





Rev. 141001

Part#	GR03FAB4 8J	Application	For 2014-2015 Chevy Camaro SS/LS/LT With RS Package
--------------	----------------	--------------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	U-Clip	2	8#
	2	Flange Brackets	2	/	4	Screw	2	8#x2"

Install Notes: Overlay Replacement Drill Cut

Installation


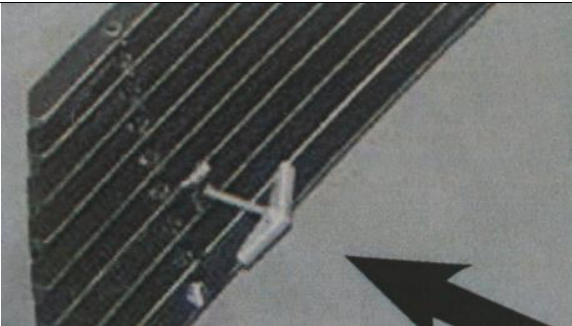


 <p>1. Identify the grille & hardware with parts list.</p>	 <p>2. Open the hood on the vehicle. Now remove the four 10mm bolts from the top of the radiator cover plate (Fig 1).</p>	 <p>3. Now remove six plastic pop clips that hold the radiator cover and the bumper cover together (Fig 2).</p>
 <p>4. Now remove the radiator cover plate (Fig 3) this will give you access to the rear of the factory grill.</p>	 <p>5. Install the two u-nuts onto the two flange brackets (Fig 4).</p>	 <p>6. Take the billet grille and insert it onto the factory grill (Fig 5).</p>
 <p>7. Take the two screws and insert them through the billet bars and the small square tabs with a hole in the center that are welded onto the back of the billet grille (Fig 6). Take the two flange brackets with the u-nuts installed and reach through the opening where the radiator cover was removed and locate the screws, take the flange brackets and install them onto the screws and tighten.</p>	<p>8. Reinstall the radiator cover.</p>	<p>9. Installation completed!!!</p>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03FAB4 8J	Application	For 2014-2015 Chevy Camaro LS/LT With RS Package
-------	----------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Machine screw	4	6-32x1 1/2"
	2	Toggle nut	4	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Take the four machine screw and insert them through the front of the billet grille bars and the small square tabs with a hole in the center that are welded to the back of the billet grille, take the four toggle wing and install them onto the machine screws.	
3	Place the billet grille with the four screws and toggle wings installed into the bumper cover opening.	
4	Using a flat screwdriver reach through the billet bars and spin the toggle wings horizontally so that they insert through the plastic bars in the bumper cover, while holding the toggle with the flat screwdriver use a phillips screwdriver to tighten the machine screws until the billet is secure in the vehicle bumper cover.	
5	Replace the clips on the splash guard if you removed them.	N/A
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!