

PATENT PRODUCT Grille Installation Instruction

Rev. 200701

Part#	GR0	3FAJ15C App	licatio	For 2008-2012 Chevy Malibu				
_	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	4	bolts	12	6-32
Parts List	2	K-Lock Nuts	12	6-32	5	Flat Tabs	4	
	3	Powder Coated Brackets	4					
Install Notes: Overlay V Replacement × Drill × Cut ×								

Step	Description	illustration		
1	Identify the grille & hardware with parts list.			
2	Remove the plastic push clips from the top side of the front fascia and the plastic filler panel. Figure 1			
3	Remove all of the small bolts from the top side of the front fascia and the plastic filler panel. Figure 2			

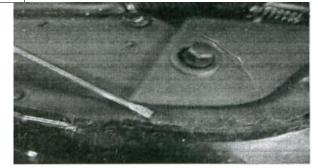




	Figure 1	Figure 2
4	Once all of the clips and bolts are removed it is now time	to remove the plastic filler panel.
5	Remove the small bolts and clips that attach the inner wh	eel well panel to the edge of the front fascia.
6	When the inner wheel well panel is free from the front fascia. Figure 3	ascia remove the 10mm bolts from each side of the
7	Remove the small bolts that attach the lower filler panel f	rom the bottom side of the front fascia.
8	Gently release each side of the front fascia from the veh fender. Figure 4	icle by pulling on the side of the front fascia near the





Figure 3

Figure 4

Release the upper section of the front fascia by gently pulling up on the section near the fender and the headlight. Figure 5

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our



20

22

Installation completed.

PATENT PRODUCT Grille Installation Instruction

Rev. 200701

4	AUTO PARTS SPECIALIST INC.	Gille in	staliation instruction	Rev. 200701		
Part#	GR03FAJ15C	Application	For 2008-2012 Chevy N	Malibu		
10	Gently rock the front fascia forward allowing enough room to access the rear of the grille shell opening.					
11	Install the fully threaded bolts into the backside of each of the billet grilles.					
12	Center the lower billet grille into the lower factory grille shell and hold in place. It may be necessary to adjust the fully threaded bolts so that they pass through the factory grille.					
13	Place the flat tabs over the fully threaded bolts and secure using the k-lock nuts.					
14	Remove the top bolts that secure the black panel to the upper grille shell. Rock the panel down to gain access to the backside of the grille shell. Figure 6					
	Fi	gure 5	Fi	gure 6		
15	threaded bolts and se	cure using the k-l front fascia back	ock nuts. Reattach the black pan into position on the vehicle and	ace. Place the flat tabs over the fully nel using the factory hardware removed lock into place. Reinstall of the factory		
16	Move on to the botto bolts that attach the side of the bumper. In the threaded tabs on Center the billet grille and hold in place. Plate over the fully threaded the k-lock nuts. Reopening and secure a filler panel to the low factory hardware.	plastic filler paninstall the fully three the backside of into the factory bace the powder ced bolts and hold center the billet all hardware. Reat	el to the lower eaded bolts into the billet grille. Sumper opening coated brackets in place using grille into the tach the plastic			

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our

Make sure the billet grille is centered and tighten the fasteners.