
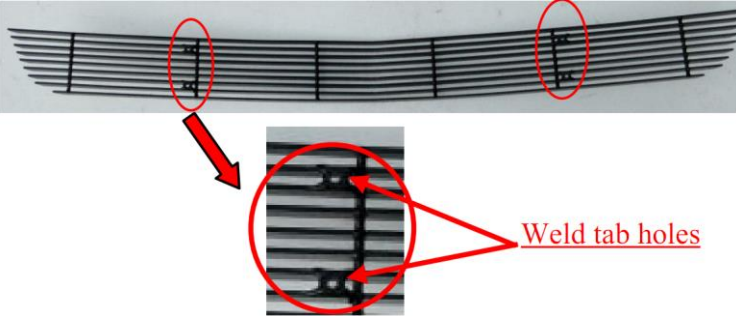
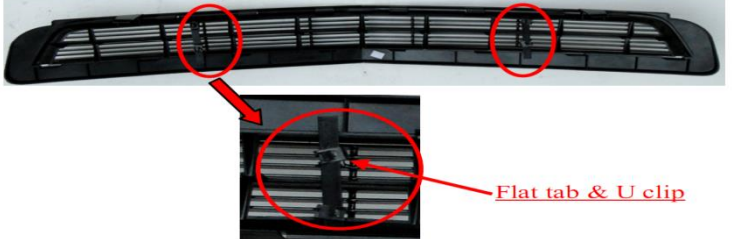


Part#	GR03FAJ27J	Application	For 2010-2013 Chevy Camaro LT/LS V6
-------	------------	-------------	-------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	4	Truss Head Tapping Screws	4	8# × 2"
	2	U- Clip	8	8#	5	Flat tab	2	2 holes tab
	3	Truss Head Tapping Screws	4	8#×3"	6	S Shaped Brackets	4	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Remove the trim panel (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell	
3	Start from upper piece. Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. Install the supplied clips onto the supplied brackets, aligning the hole in the clip with the hole in the bracket. The flat smooth side of the clip should be on the black side of the bracket. Secure it with the supplied screws going through the front of the grille and tighten them into the brackets.	
4	Move on to bottom piece. Center the billet grille from front side, make sure the studs are through the OEM grille.	
5	Insert the screws from front side, make sure the screws go through the welded tab holes on the grille.	
6	Fasten the billet grille insert on to the OEM grille with flat tabs, screws & U-clips on the back side of the OEM grille.	
7	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!