



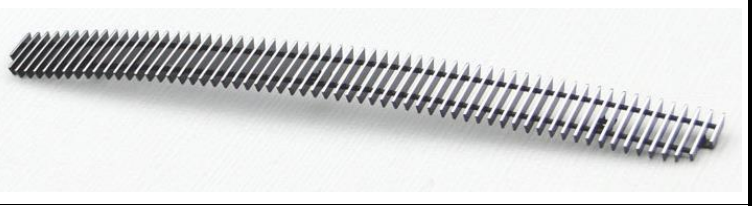
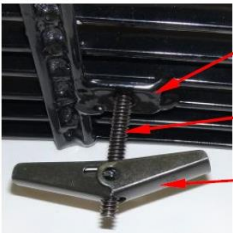
Grille Installation Instruction

Rev. 190301

Part#	GR03FEB46V	For 2006-2010 Hummer H3
-------	-------------------	--------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Toggle Nut	3	6# -32
2	Bolt	3	6#-32 x 1.5"					

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: remove the plastic cover on the bottom of the OEM front bumper, which will allow access to the rear of the OEM grille	
3	Insert the screws into the weld tab hole from front side of the billet grille.	<div data-bbox="776 926 1036 1087" style="border: 1px solid black; padding: 5px; display: inline-block;"> Picture for reference only. This is not actual grille. </div>  <div data-bbox="1320 936 1474 974" style="border: 1px solid black; padding: 2px; display: inline-block;">Weld tab</div> <div data-bbox="1320 1014 1474 1052" style="border: 1px solid black; padding: 2px; display: inline-block;">Screw</div> <div data-bbox="1320 1092 1474 1129" style="border: 1px solid black; padding: 2px; display: inline-block;">Toggle nut</div>
4	Center the billet grille onto the OEM grille. Press & insert the toggle nuts on to the rear of the OEM grille through the gap between the horizontal bars.	
5	Secure the grille using the toggle nuts and screws from the front side of the billet grille with a screw driver.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!