



PATENT PRODUCT

Grille Installation Instruction


Rev. 20221101

Part#	C65278C&J&S	Application	For 2021-UP Chevy Tahoe High Country
--------------	-------------	--------------------	--------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	2	Stainless Steel	#4	1-Hole Flat tab	8	
	#2	Screws	18	#8X2.5"	#5	2-Hole Flat tab	4	
	#3	Clip Nuts	18	#8				

Install Notes: Overlay Replacement Drill Cut

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the billet grille against the OEM grille shell, center and mark (2) holes for drilling. Remove billet grille and drill holes according to your mark.	
4	Install the Clip Nuts onto the tabs. Thread a Screw in each hole of tab welded to the grille. Secure billet grille using the Clip Nuts from the back side of the grille shell.	

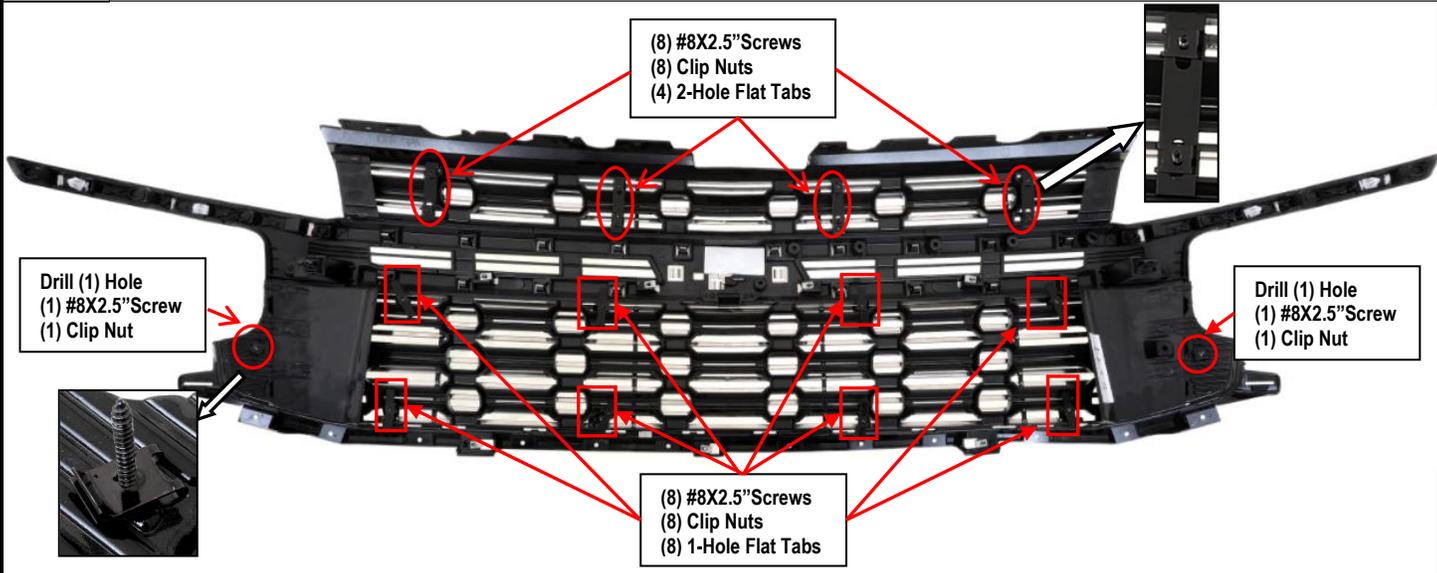

5	Make sure the insert is centered and tighten the hardware.
---	--

6	Reinstall the plastic shroud with the fasteners removed in Step 2.
---	--

7	Installation completed.	
---	-------------------------	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!