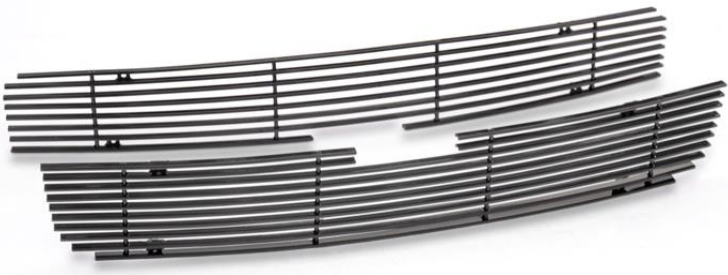


Part#	GR03FEG28A/H	Application	For 2005-2008 Chevy Uplander
--------------	--------------	--------------------	-------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	2	Aluminum	3	Screws	2	8# × 2"
	2	Flat Nut	2	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove grilles from the box and identify the top grille from the bottom grille. (The top grille angled and has only one cut out for the bow tie; the bottom has 2 bars cut out for the bow tie.)	
4	Place screws through the welded aluminum tabs on the grille. Center the billet grille into the opening of the factory grille shell.	
5	Secure billet grille using the flat nut from the back side of the OEM grille shell.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!