


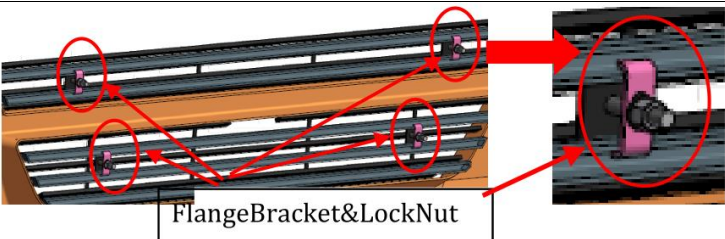



Part#	GR03FEG52A/H	Application	For 2005-2010 Chevy Cobalt
-------	---------------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	3	Thread Stud	4	10-24 X2"
2	Flange Bracket	4	/	4	Lock Nuts	4	10-24	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	<div data-bbox="798 801 1013 936" style="border: 1px solid black; padding: 2px;">Remove the black plastic cover</div> 
3	Secure the 4 studs into the thread hole on welded tabs at the rear of the billet grille.	 <div data-bbox="1008 1236 1273 1272" style="border: 1px solid black; padding: 2px;">Stud & thread hole</div>
4	Center the billet grille onto the OEM plastic grille from front side, and make sure the studs are through the OEM honey comb or cross bar.	
5	Fasten the billet grille onto the OEM plastic grille on the rear with supplied flange brackets & Lock nuts.	 <div data-bbox="928 1541 1257 1585" style="border: 1px solid black; padding: 2px;">FlangeBracket&LockNut</div>
6	Make sure the billet grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!