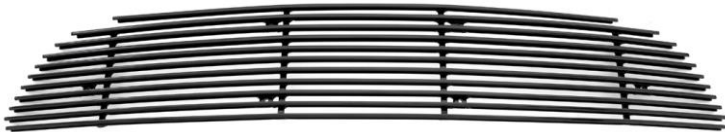


Part#	GR03FEG53J	Application	<b>For 2005-2010 Chevy Cobalt SS</b> <b>For 2005-2010 Chevy Cobalt Sport Not For Base/LT/LS/LTZ</b>
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	4	2 Hole Powder Coated Brackets	2	
	2	K-lock Nuts	6		5	Single Hole Powder Coated Brackets	2	
	3	Fully Threaded Studs	6	2"				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Install the fully threaded studs into the threaded holes on the backside of the billet grille.	N/A
4	Center the billet grille into the bumper opening.	N/A
5	Place the 2 hole powder coated brackets over the fully threaded studs near the middle of the billet grille and hold in place using the k-lock nuts.	N/A
6	Now place the single hole powder coated brackets over the fully threaded studs on the outside of the billet grille and hold in place using the k-lock nuts.	N/A
7	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	N/A
8	Reinstall the black plastic cover which was removed in step 2.	N/A
9	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!