
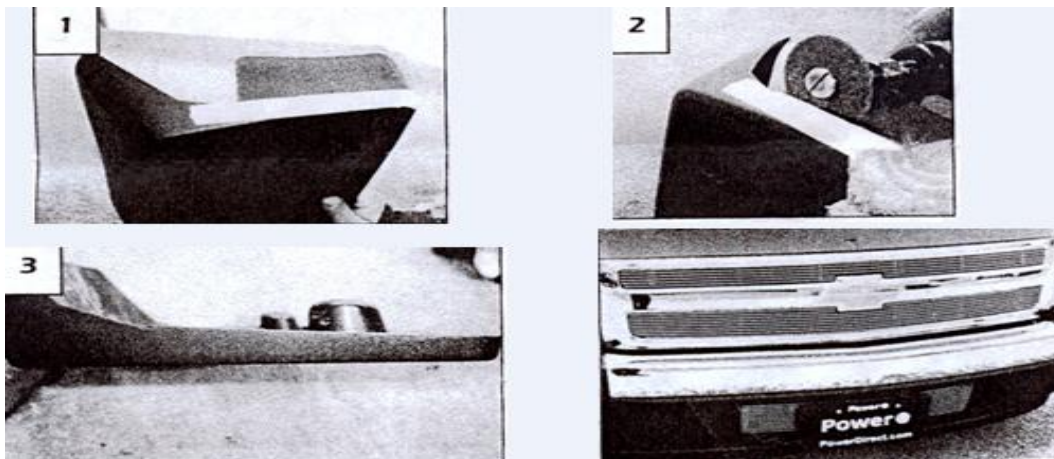


Part#	GR03FEG85A	Application	2007 Chevrolet Silverado - Bumper Billet Grille Insert
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Nylon Lock Nuts	6	6-32
	2	Machine Screws	4	6-32×1.5"	5	Washers	6	#10
	3	Machine Screws	2	6-32×2"	6	Fender Washers	2	1" × 1/8"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Use a screw driver to remove the license plate. The factory license plate mount is held to the bumper air dam by four aluminum rivets. Drill the rivets out with 3/16" drill. Remove and retain to re-install the license plate.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. Drill four 3/16" holes at each mark. Re-center the grille. Insert a 1.5" screw into each tab; from behind the air dam, secure each screw using the #10 washers and lock nuts.	
4	The factory license plate mount can be modified to mount on the bumper billet. A portion of the license plate mount must be trimmed to re-install. As shown; apply a strip of masking tape to draw a line on each end (1). Use a die grinder to remove the excess material from the license plate mount (2). The last picture shows a profile view of the license mount after your cuts (3). Center the upper mounting holes on the plate mount to the factory holes in the air dam. Install the 2" machine screws and fender washers into the upper mounting holes; secure the screws from behind the air dam using the remaining #10 washers and nuts.	
5	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!