





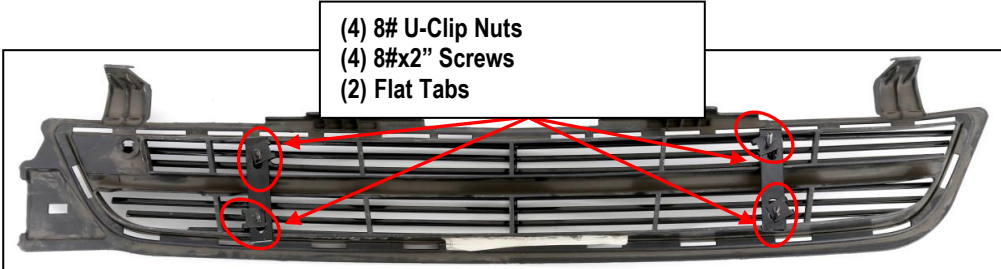

PATENT PRODUCT Grille Installation Instruction

Rev. 20200601

Part#	C65944C&J&S	Application	For 2013 Chevy Malibu
--------------	-------------	--------------------	-----------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Screws	4	8#x2"
	#2	U-Clip Nuts	4	8#	#4	Flat Tabs	2	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Install the U-clip nuts onto the tabs as shown.	
4	Secure billet grille using the U-Clip Nuts, Screws and Tabs from the back side of the grille shell.	
		<div style="border: 1px solid black; padding: 5px; display: inline-block; margin-bottom: 10px;"> (4) 8# U-Clip Nuts (4) 8#x2" Screws (2) Flat Tabs </div> 
5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!