



# PATENT PRODUCT


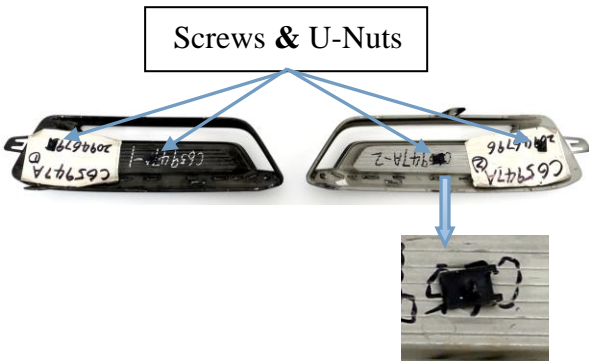

## Grille Installation Instruction

Rev. 141230

<b>Part#</b>	GR03FEI47 C	<b>Application</b>	For 2014-2016 Chevy Impala
--------------	----------------	--------------------	----------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Stainless steel	3	Screw	4	8#x1"
	2	Billet Grille	1	Stainless steel	4	U-Clip Nut	4	8#

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Carefully pull off the wire and the fog light from front bumper, this will allow you easily to install the billet grille on the fog light cover.	
3	Center the billet grille on the fog light cover and then you need mark and drill four holes. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the fog light cover.	
4	Secure billet grille using the toggle nuts from the back side of the fog light cover.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">Screws &amp; U-Nuts</div> 
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!