



# PATENT PRODUCT




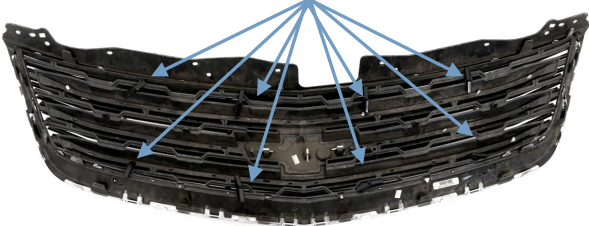

## Grille Installation Instruction

Rev. 150115

<b>Part#</b>	GR03FEI48A	<b>Application</b>	2013-2015 Chevy Traverse Logo Show Main Upper
--------------	------------	--------------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Bolt	8	6-32x2"
	2	Toggle Nut	8	6-32	4	/	/	/

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Insert the 6# bolts through the weld tab holes on the billet grille from front side. And install a toggle nut on one bolt.	 <div style="border: 1px solid red; padding: 2px; color: red; font-size: small; margin-top: 5px;">           *Pictures are for reference only, actual Billet Grille may be a little different *         </div>
3	Center the billet grille onto the factory grille. Insert the toggle nut through the honey comb to the rear of the OEM grille. And then secure the billet grille onto the OEM grille with Bolt driver from front side of the billet grille.	 <div style="text-align: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Bolts &amp; Toggle Nuts</div>  </div>
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!