





PATENT PRODUCT Grille Installation Instruction


Rev. 20200401

Part#	C65091C&J&S	Application#	For 2019-2020 Chevy Camaro 1SS/2SS
--------------	-------------	---------------------	------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless Steel	3	Clip Nuts	4	8# Lock Nut
	2	Truss Head Tapping Screws	4	8#x2 1/2"	4	Tabs	4	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Install the clip nuts onto the tabs as shown.	
4	Secure billet grille using the Clip nuts and tabs from the back side of the grille shell.(Fig 1,2,3)	

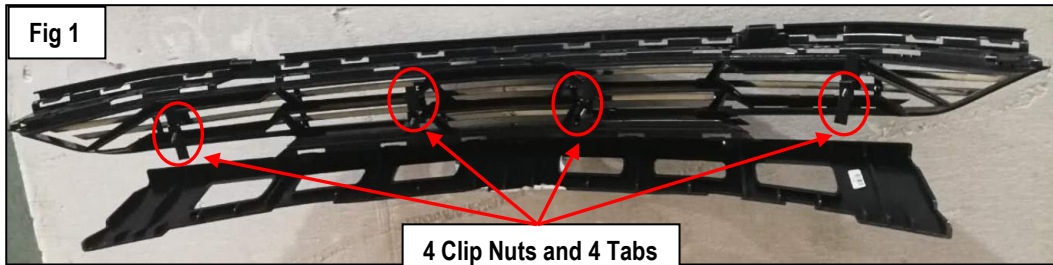

5	Make sure the insert is centered and tighten the hardware.
6	Reinstall the plastic cover with fasteners removed in Step 2.
7	Installation completed.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!