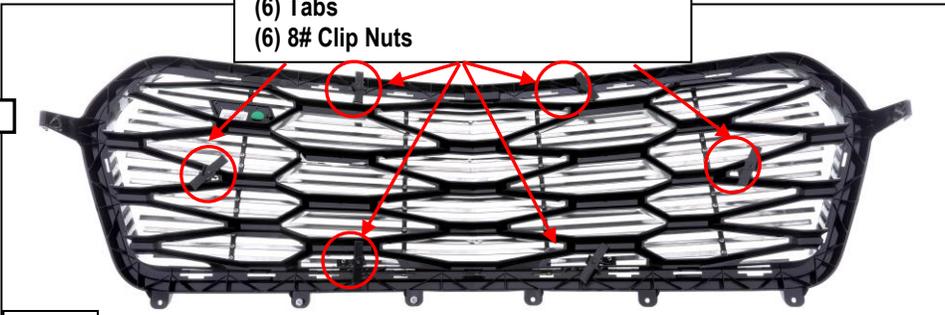


Part#	C65095C&J&S	Application	For 2019-UP Chevy Camaro ZL1
--------------	-------------	--------------------	------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Clip Nuts	6	8#
	#2	Truss Head Tapping Screws	6	8#×2.5"	#4	Tabs	6	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Install the clip nuts onto the tabs as shown.(Fig 1)	<div style="border: 1px solid black; padding: 5px; display: inline-block;">Fig 1</div> 
4	Secure billet grille using the Clip Nuts, Truss Head Tapping Screws and Tabs from the back side of the grille shell. (Fig 2 & 3)	<div style="border: 1px solid black; padding: 5px; display: inline-block;">Fig 2</div>  <div style="border: 1px solid black; padding: 5px; display: inline-block; margin-left: 20px;"> (6) 8#×2.5" Truss Head Tapping Screws (6) Tabs (6) 8# Clip Nuts </div>  <div style="border: 1px solid black; padding: 5px; display: inline-block; margin-left: 20px;">Fig 3</div>
5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!