



PATENT PRODUCT


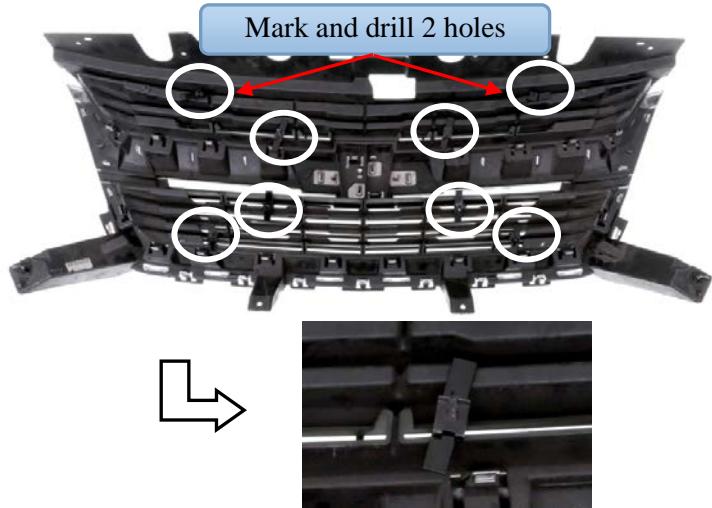

Grille Installation Instruction

Rev. 190501

Part#	GR03FFC16 C/S/J	Application	For 2015-2019 Chevy Colorado Not For ZR2 Model
--------------	--------------------	--------------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	3	Cross Head Tapping Screws	8	8# x 3"
	2	Flat Tab	8		4	U-Clip Nut	8	8#

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Hold the grille against the OEM grille shell, center and mark holes for drilling. Remove grille and drill holes according to your mark. Be sure the studs are through the OEM grille shell.	
4	Slide one U-clip nut on each flat tabs. Place screws through the welded aluminum tabs on the grille, and attach a flat tab on backside of factory grille.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!