

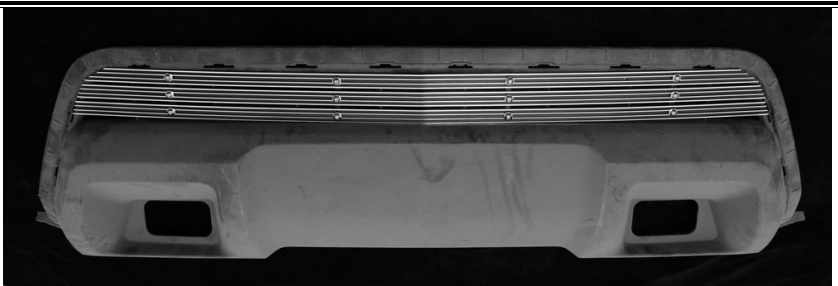
Part#	GR03FFC1 7F	Application	For 2015-2020 Chevy Colorado Not For ZR2 Model
-------	----------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billets	3	Aluminum	6	Wrench	1	Tool for fastening Nylon lock Nuts
	2	Back Bracings	4	/	7	Studs	4	#10X1.5"
	3	Chromed Bolts	12	Fasteners for billet grille assembly	8	Lock Nuts	4	#10
	4	Nylon Lock Nuts	12	Fasteners for billet grille assembly	9	Flat Tab	2	/
	5	Allen Key	1	Tool for fastening Chromed Bolts				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list. Assemble billet grille as shown.	<p style="text-align: center;">Front</p> <p style="text-align: center;">Back</p>
2	Remove front bumper according to factory instruction. This will allow access to the rear of bumper grille shell.	
3	Hold the billet insert up to the opening of the factory shell, and make sure that it is centered in the grille shell.	
4	Slide one U-clip nut on each flat tab. Place screws through the welded aluminum tabs on the grille, and attach a flat tab on backside of factory grille.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the front bumper which was removed in step 2.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03FFC1 7F	Application	For 2015-2020 Chevy Colorado Not For ZR2 Model
7	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!