



# PATENT PRODUCT


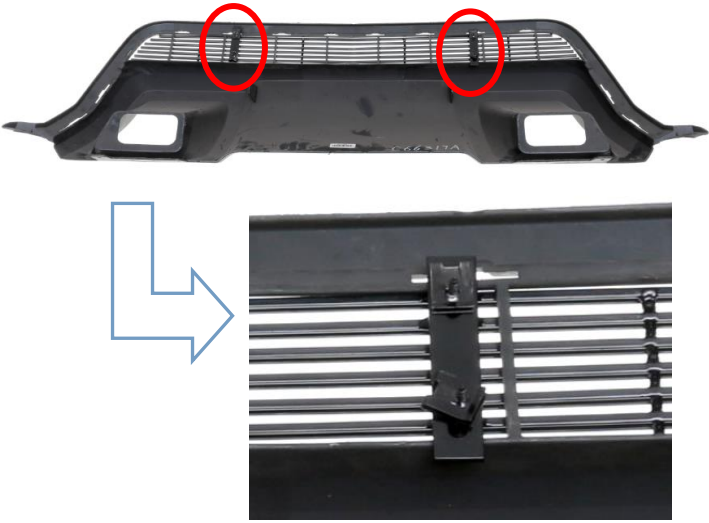
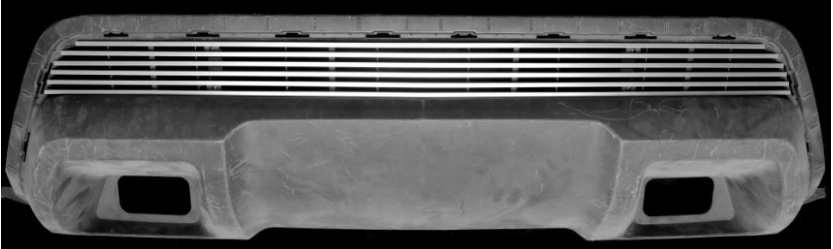
## Grille Installation Instruction

Rev. 181201

<b>Part#</b>	GR03FFC17 C/S/J	<b>Application</b>	<b>For 2015-2019 Chevy Colorado Not For ZR2 Model</b>
--------------	--------------------	--------------------	---

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Stainless steel	3	Cross Head Tapping Screws	4	8# x1 1/4"
	2	Flat Tab	2		4	U-Clip Nut	4	8#

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove front bumper according to factory instruction. This will allow access to the rear of bumper grille shell.	
3	Hold the billet insert up to the opening of the factory shell, and make sure that it is centered in the grille shell.	
4	Slide one U-clip nut on each flat tabs. Place screws through the welded aluminum tabs on the grille, and attach a flat tab on backside of factory grille.	
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the front bumper which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!