



PATENT PRODUCT



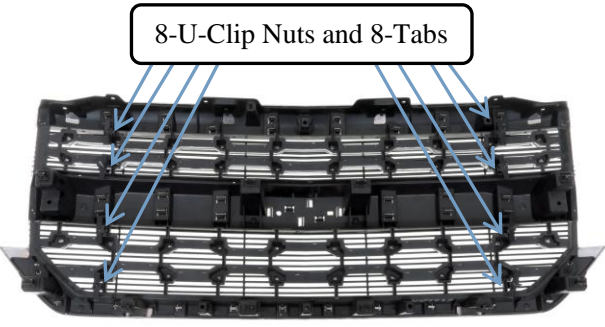

Grille Installation Instruction

Rev. 190401

Part#	<i>GR03FFC60 C/J/S</i>	<i>Application</i>	For 2016-2018 Chevy Silverado 1500 Not For Z71 and High Country Model		
--------------	----------------------------	--------------------	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Upper Billet Grille	1	Stainless steel	4	U-Clip Nuts	8	8#
	2	Lower Billet Grille	1	Stainless steel	5	Tabs	8	
	3	Bolts	8	8#x2.5"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolts to the threaded holes on the front of the grille. Be sure the bolts are through the grille shell.	
4	Install the U-Clip Nuts onto the Tabs.	
5	Secure billet grille using the U-Clip nuts and tabs from the back side of the grille shell.	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; width: fit-content; margin: 0 auto;">8-U-Clip Nuts and 8-Tabs</div> 
6	Make sure the billet grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!