



# PATENT PRODUCT


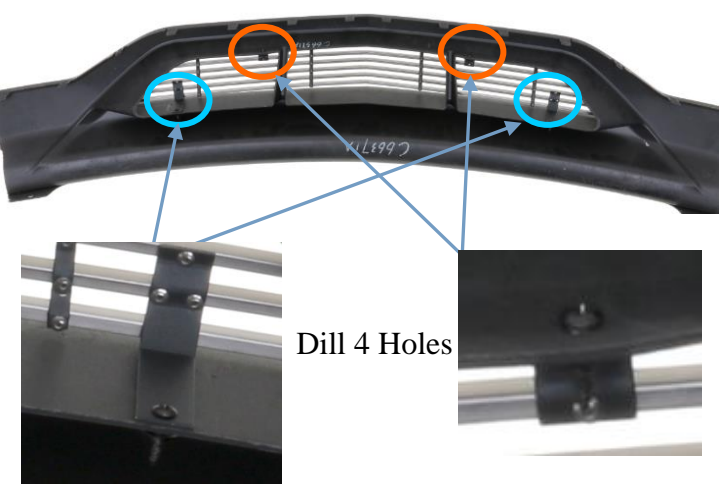

## Grille Installation Instruction

Rev. 180601

<b>Part#</b>	GR03FFC71C/J	<b>Application</b>	<b>For 2016-2017 Chevy Equinox</b>
--------------	--------------	--------------------	------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Stainless steel	3	Cross Head Tapping Screws	4	8#3/4"
	2	U-Clip Nuts	4	8#				

**Install Notes:** Overlay  Replacement  Drill  Cut

<b>Step</b>	<b>Description</b>	<b>illustration</b>
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Hold the billet insert up to the opening of the factory shell, and make sure that it is centered in the grille shell. You need mark and dill four holes.	
4	Place screws through the welded aluminum tabs on the grille, and attach a U-clip nut on backside of factory grille.	
5	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!