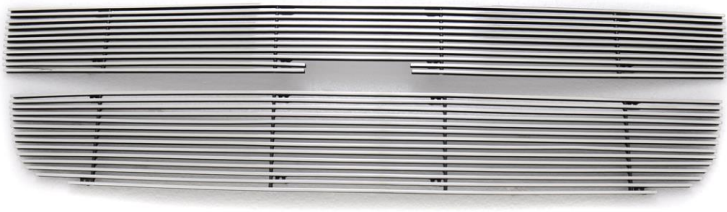


Part#	GR03FFD36A/H	Application	<b>For 2003-2016 Chevy Express Van</b>
-------	--------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	4	Socket threaded Studs	16	10-24 × 1 1/4 "
	2	Flat Brackets	4		5	'U' Tabs	4	
	3	Keyp Nuts	16	10-24				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. Remove the grille shell from the vehicle.	
3	Secure the fully threaded studs into the back side of the billet grille.	
4	Place billet grille into the opening of the grille shell.	
5	Center the grille into the opening, then place the brackets over the fully threaded studs.	
6	Secure the key nuts starting from the center out.	
7	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
8	Reinstall the black plastic cover which was removed in step 2.	
9	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!