
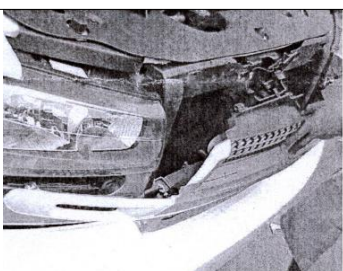
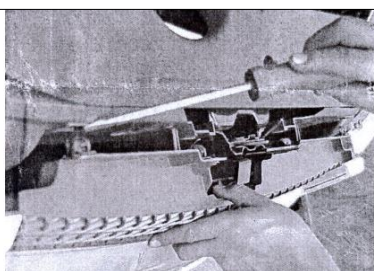
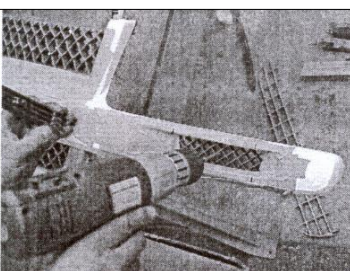


Part#	GR03FFD68A	Application	<b>06~10 Chevy Trailblazer SS Model Main Upper Billet Grille (4pc)</b>					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	4	Aluminum	3	Fully Threaded Studs	10	1 1/2"
	2	K-Lock Nuts	10		4	Sm. Flat Brackets	10	

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the factory grille shell from the core support. To do this you will need a flat screwdriver. Slide the screwdriver in between the metal clip, and the plastic, this will free the grille shell from the core support. See figure 1 & 2.	
3	Mask off the grille shell with a light adhesive tape, this will help protect the grille shell from being damaged during the install.	
4	Attach the fully threaded studs to the backside of the two main grilles pieces.	
5	Place each of the pieces into each of the sections. Center the grilles, then place the powder coated brackets over the fully threaded studs from the backside of the grille shell.	
6	Be sure that each of the grilles is centered into the pockets, and then secure using the K-Lock nuts.	
7	Place each of the small wing billet pieces into the pockets in the bar of the grille shell.	
8	Once each of the wing pieces are centered and in place, use a small marking tool, and make a mark in the grille shell through the mounting tab. Once the marks have been made drill a hole slightly larger then the fully threaded stud. See figure 3.	
	  	
9	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
10	Reinstall the black plastic cover which was removed in step 2.	
11	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!