
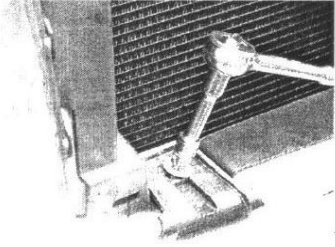
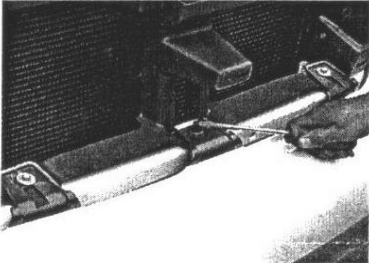


Part#	<b>GR03FFD69A</b>	Application	<b>06~10 Chevy Trailblazer SS – Low Bumper Billet Grille</b>
-------	-------------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Fully Threaded Studs	10	1 1/4"
	2	K-lock Nuts	10		5	2 Holed Powder Coated Brackets	2	
	3	Tabs	6					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the factory grille shell and save all hardware as it will be reused later.	
3	Remove the two bolts from the top side of the bumper. Figure 1 Remove the center push clip from the top side of the bumper. Figure 2	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Figure 1</p> </div> <div style="text-align: center;">  <p>Figure 2</p> </div> </div>
4	Gently unhook the bumper from the locator pins that hold the bumper in place.	
5	Install the fully threaded studs into the threaded holes on the backside of the billet grille.	
6	Center the billet grille into the bumper opening.	
7	Place the powder coated brackets over the fully threaded studs and hold in place using the k-lock nuts.	
8	Re-center the billet grille and secure all hardware.	
9	Reinstall the bumper and factory grille shell using the hardware from steps 2-3.	
10	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!