



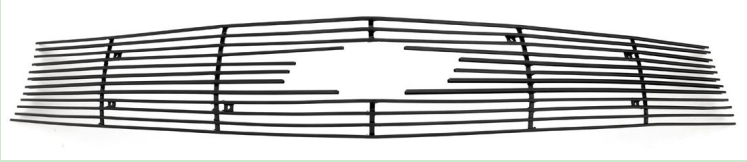
Grille Installation Instruction

Rev. 150116

Part#	GR03FFG22A	Application	2010 Chevy Camaro Long Logo Show – Billet Grille
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Truss Head Tapping Screws	6	8# × 1/2 "
	2	U- Clip Nuts	6	8#	4	'J' Hooks	6	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	First, take the U-Clip Nuts and install them onto the 'J' hooks with the small thorn.	
4	Next take the 'J' hooks and put them into the factory grille with the hooked end toward the rear of the vehicle and wrapping down around the horizontal plastic bar in the factory grille. They will just sit there until the grille is installed so be careful not to bump or move them. Do the same to the other side of the vehicle and the remaining 'J' hooks.	
5	Now take the billet grille and insert it into the factory grille opening being very careful not to knock the 'J' hooks off.	
6	With the billet grille inserted into the factory grille take a small flat screwdriver and reach through the opening between the billet bars and hold the 'J' hook steady while you take the screw and insert it between the billets and through the bracket with a hole in it that is welded to the backside of the billet grille. Use a phillips screwdriver to tighten the screw while holding the 'J' hook steady with a flat screwdriver.	
7	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
8	Reinstall the black plastic cover which was removed in step 2.	
9	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!