



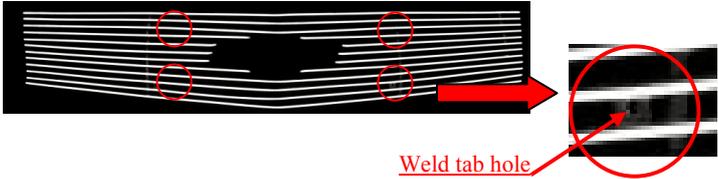
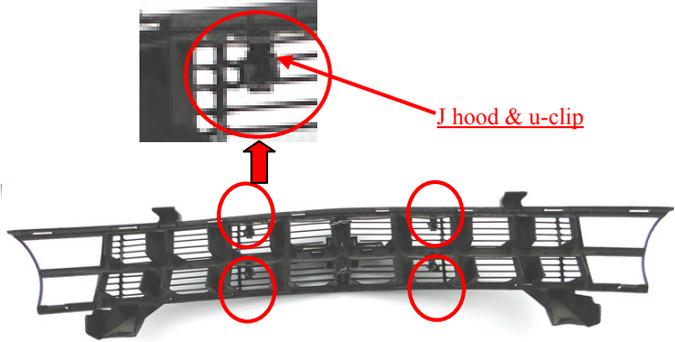
# Grille Installation Instruction

Rev. 130101

Part#	GR03FFG23H	10-13 Chevy Camaro LT/LS/RS/SS Short and With Logo Show
-------	------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	1	12 bars	3	Truss Head Tapping Screws	4	8x2 1/2"
	2	U- Clip	4	8#	4	J Hook	4	/

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell	N/A
3	Center the billet grille from front side, make sure the studs are through the OEM grille.	
4	Insert the screws from front side, make sure the screws go through the welded tab hole on the grille.	 <i>Weld tab hole</i>
5	Fasten the billet grille insert on to the OEM grille with J hoods, screws & U-clips on the back side of the OEM grille.	 <i>J hood &amp; u-clip</i>
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!