
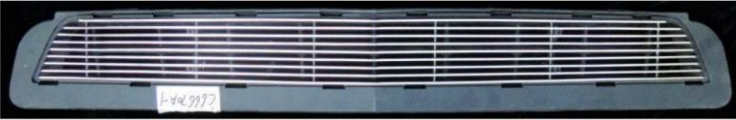
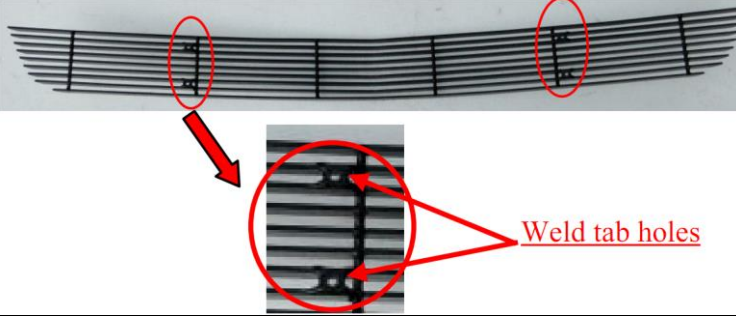
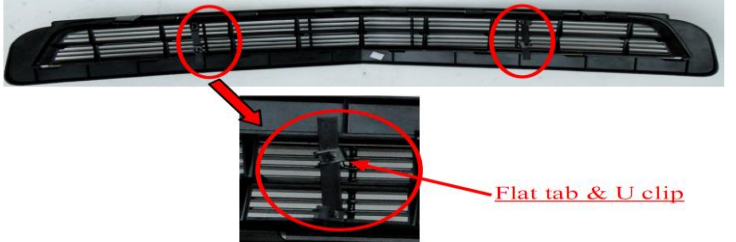



Part#	GR03FFG24C	Application	For 2010-2013 Chevy Camaro LT/LS V6
-------	------------	-------------	-------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Truss Head Tapping Screws	4	8# × 2"
	2	U- Clip	4	8#	4	Flat tab	2	2 holes tab

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the trim panel (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell	
3	Center the billet grille from front side, make sure the studs are through the OEM grille.	
4	Insert the screws from front side, make sure the screws go through the welded tab holes on the grille.	 Weld tab holes
5	Fasten the billet grille insert on to the OEM grille with flat tabs, screws & U-clips on the back side of the OEM grille.	 Flat tab & U clip
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!