
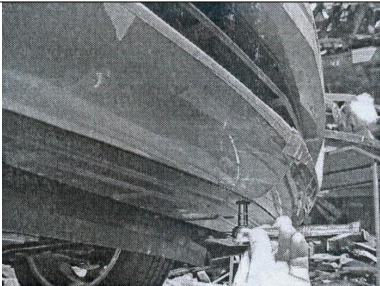


Part#	GR03FFG81A	Application	08~10 Chevy Malibu – Low Bumper Billet Grille
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Fully Threaded Studs	8	2 "
	2	K-Lock Nuts	8	10-24	4	Powder Coated Brackets	4	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the five small bolts that attach the plastic filler panel to the lower side of the bumper. Figure 1	
3	Install the fully threaded studs into the threaded tabs on the backside of the billet grille.	N/A
4	Center the billet grille into the factory bumper opening and hold in place.	N/A
5	Place the powder coated brackets over the fully threaded studs and hold in place using the k-lock nuts.	N/A
6	Re-center the billet grille into the opening and secure all hardware.	N/A
7	Reattach the plastic filler panel to the lower side of the bumper using the factory hardware that was removed in step 2.	N/A
8	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!