



PATENT PRODUCT

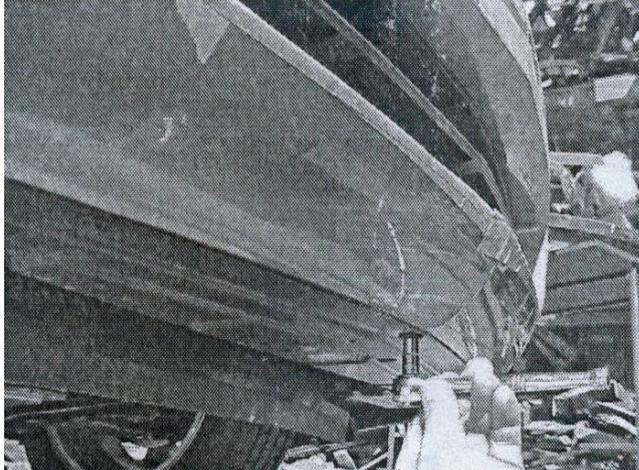
Grille Installation Instruction

Rev. 180201

Part#	C66781C/J	<i>Application</i>	For 2008-2012 Chevy Malibu		
--------------	-----------	--------------------	-----------------------------------	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	Fully Threaded Studs	8	6-32
2	K-Lock Nuts	8	6-32	4	Powder Coated Brackets	4		

Install Notes:
 Overlay
 Replacement
 Drill
 Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the five small bolts that attach the plastic filler panel to the lower side of the bumper.	
3	Install the fully threaded bolts into the threaded tabs on the backside of the billet grille.	
4	Center the billet grille into the factory bumper opening and hold in place.	
5	Place the powder coated brackets over the fully threaded bolts and hold in place using the k-lock nuts.	N/A
6	Re-center the billet grille into the opening and secure all hardware.	
7	Reattach the plastic filler panel to the lower side of the bumper using the factory hardware that was removed in step 2.	N/A
8	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!