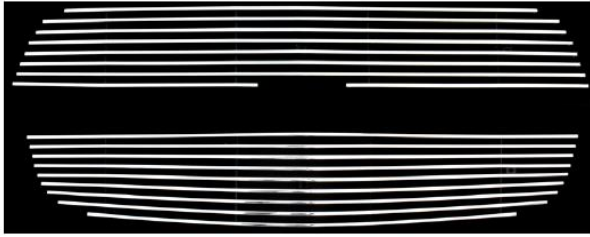

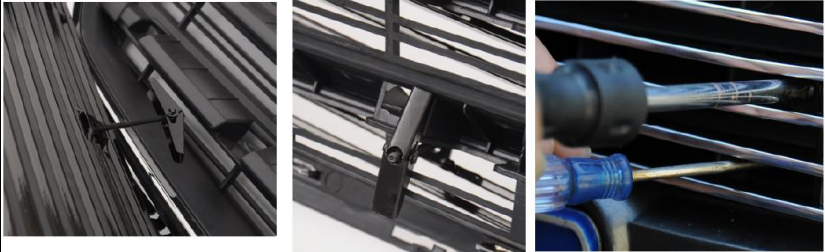



Part#	GR03FFI39A/H	Application	For 2012-2016 Chevy Sonic (Not For RS Models)
-------	--------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	3	Bolt	6	6-32x1.5"
	2	Toggle Nut	6	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Insert the 6# bolts through the weld tab holes on the billet grille from front side. And install a toggle nut on one bolt.	
3	Center the billet grille onto the factory grille. Insert the toggle nut through the honey comb to the rear of the OEM grille. And then secure the billet grille onto the OEM grille with 2 screwdrivers from front side of the billet grille.	
4	Make sure the billet grille is centered and tighten the fasteners.	
5	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!