
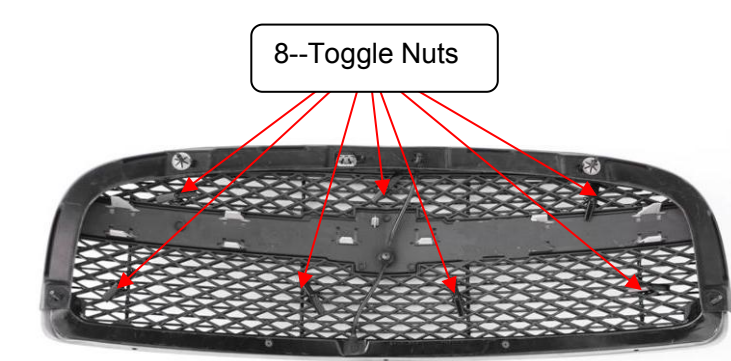



| | | | |
|-------|------------|-------------|-----------------------------------|
| Part# | GR03FFI41H | Application | 2006-2010 Chevy HHR SS Main Upper |
|-------|------------|-------------|-----------------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------------|-----|-------------|------|------------|-----|-------------|
| | 1 | Upper Billet Grille | 1 | 6 Billets | 3 | Bolt | 7 | 6-32x1" |
| | 2 | Lower Billet Grille | 1 | 10 Billets | 4 | Toggle Nut | 7 | 6-32 |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | |
| 3 | Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. | |
| 4 | Secure billet grille using the toggle nuts from the back side of the OEM grille shell. |  |
| 5 | Make sure the billet grille is centered and tighten the fasteners. | |
| 6 | Reinstall the black plastic cover which was removed in step 1. | |
| 7 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!