
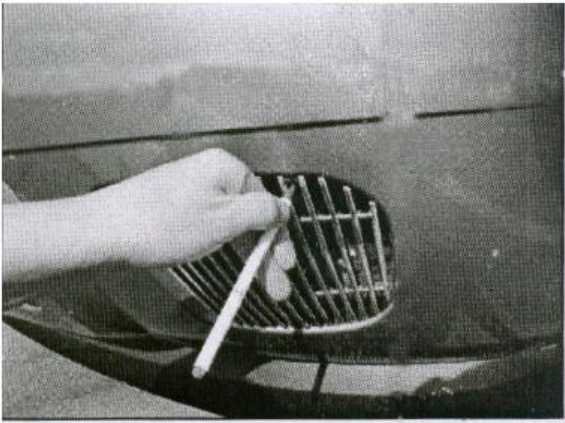
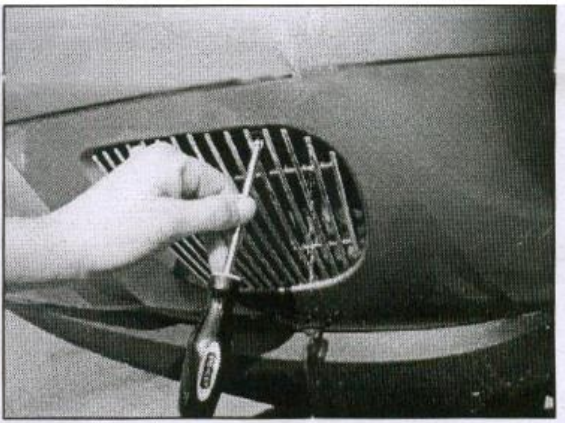


Part#	GR03FFJ25 V/E	Application	For 2007-2014 Chevy Tahoe Fog Light Cover
-------	------------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	4	"L" Metal Brackets	2	
	2	Flat Nut	6	8#	5	Truss Socket Tapping Screws	8	8×1"
	3	U-Clip Nuts	2	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Position right hand section of the billet grille onto grille shell cavity. Assure it is centered, straight and level.	
3	Use the billet grille as a template to mark the drill positions (Figure 2).	
4	Using a Drill with a 1/16" drill bit, drill a pilot hole at marked locations.	
5	Use the included Truss Socket Tapping Screws to attach the billet grille to the vehicle (Figure 3).	
		
	Figure 2 – Marking drill locations	Figure 3 – Attaching the Billet Grille to the vehicle
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Repeat Steps 2-5 for the left hand side billet grille.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!