


<b>Part#</b>	<b>GR03FGH0 4A</b>	<b>Application</b>	<b>For 2007-2010 Chevy Silverado 3500 HD For 2007-2010 Chevy Silverado 2500 HD</b>
--------------	------------------------	--------------------	--

<b>Parts List</b>	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	4	Flange Brackets	2	
	2	Flat Tabs	4		5	U- Clip Nuts	12	8#
	3	Flange Brackets	4		6	Truss Head Tapping Screws	12	8×2"

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Place one screw through each of the welded tabs on the billet grille. Place a U-clip nut over each of the holes on the tabs.	N/A
4	Where the screws come through the grille shell, place a tab in align with the screw and tighten.	N/A
5	Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center. <b>DO NOT OVER TIGHTEN SCREWS.</b>	N/A
6	Repeat steps 3 -5 for the bottom grille.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
We are not responsible for any damage caused by the installation. Thank you for choosing our product!



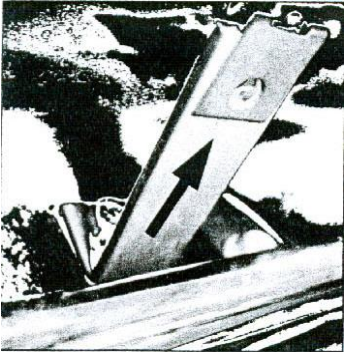
# Grille Installation Instruction

Rev. 130601

Part#	GR03FGH0 4A	Application	For 2007-2010 Chevy Silverado 3500 HD / 2500HD For 2007-2013 Chevy Silverado 1500
-------	----------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	1	Stainless steel	5	Lock Washers	2	1/4"
	2	Bolts	2	1/4-20x3/4 "	6	Screws	2	#8 x1 1/4 "
	3	Nuts	2	1/4-20	7	U-Nuts	2	#8
	4	Flat Washers	2	1/4"	8	L Brackets	2	/

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	Remove the radiator cover from the vehicle; then the four 10mm bolts along the top of the grille. The grille has four metal clips along the bottom and two in the center; these secure the grille to the core support. Use a slotted screwdriver to release the clips. Remove the grille.	
3	From the top of the factory bumper, remove two round plastic fasteners. You will use these holes to install your new bumper grille. Install a #8 U-Nut on the smaller 3/16" hole in 'L' brackets. Use the 1/4 bolts, nuts and washers to secure the other end (use the hole closest to the bend) to the bumper. Install into the plastic fasteners holes (do not tighten at this time). Center the billet into the opening; use the #8 screws to secure the billet to the brackets. Adjust the mounting brackets if needed; tighten the hardware.	
4	Re-install grille assembly and radiator cover back onto the vehicle.	N/A
5	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!