



PATENT PRODUCT


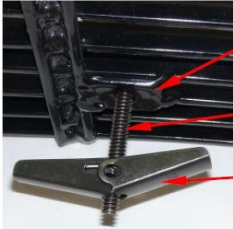

Grille Installation Instruction

Rev. 190701

Part#	GR03FGH87 J	For 2003-2005 Chevy Silverado 1500/1500 SS /1500 HD / 2002-2006 Chevy Avalanche/2500 Without Body Cladding/ 2003-2004 Chevy Silverado 2500 /2500 HD/ 3500
--------------	------------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
		1	Billet Grille	2	Stainless steel	3	Truss Head Screws	8
	2	Toggle Nuts	8	6#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: remove the plastic cover on the bottom of the OEM front bumper, which will allow access to the rear of the OEM grille	
3	Insert the screws into the weld tab hole from front side of the billet grille.	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <p>Picture for reference only. This is not actual grille.</p> </div>  <div style="margin-left: 10px;"> <p style="border: 1px solid black; padding: 2px; display: inline-block;">Weld tab</p></div> <div style="margin-left: 10px;"> <p style="border: 1px solid black; padding: 2px; display: inline-block;">Screw</p></div> <div style="margin-left: 10px;"> <p style="border: 1px solid black; padding: 2px; display: inline-block;">Toggle nut</p></div> </div>
4	Center the billet grille onto the OEM grille. Press & insert the toggle nuts on to the rear of the OEM grille through the gap between the horizontal bars.	
5	Secure the grille using the toggle nuts and screws from the front side of the billet grille with a screw driver.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



PATENT PRODUCT


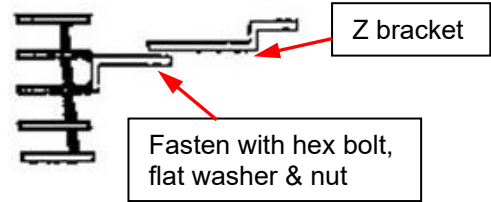
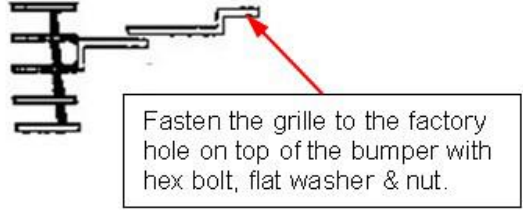
Grille Installation Instruction

Rev. 190401

Part#	GR03FGH87 J	For 2003-2006 Chevy Silverado 1500 / 2500 HD / 3500 / 1500 HD / 2003-2004 Chevy Silverado 2500 / 2007-2007 Chevy Silverado 1500 Classic Style/ 2500 HD Classic Style/ 3500 Classic Style/ 2002-2006 Chevy Avalanche Without Body Cladding
--------------	----------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Right Billet Grille	1	Stainless steel	5	Flat Washers	4	1/4"
	2	Left Billet Grille	1	Stainless steel	6	Lock Washers	4	1/4"
	3	Hex Bolts	4	1/4"-20x3/4"	7	"Z" Bracket Tabs	2	/
	4	Nuts	4	1/4"-20				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Attach the Z brackets to the billet insert using the hardware provided. Do not tighten the hardware at this time.	
3	Center the billet insert behind the bumper opening. The insert is long enough to cover both openings in the bumper. Align the mounting clips to the factory holes on top of the bumper. Fasten them using the hardware provided. Make sure the insert is centered and then tighten the fasteners.	
4	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!



PATENT PRODUCT


Grille Installation Instruction

Rev. 190301

Part#	GR03FGH87 J	Application	For 2003-2006 Chevy Silverado 1500/ 500 HD / 3500 Tow Hook Cover/1500 HD Tow Hook Cover/2003-2004 Chevy Silverado 2500 Tow Hook Cover/2007-2007 1500 /2500 HD / 3500 Tow Hook Cover Classic Style/2002-2006 Chevy Avalanche Tow Hook Cover Without Body Cladding
--------------	----------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	3	Speed Clips	6	8#
	2	Counter Sunk Screws	6	8#x3/4"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Center the billet grille into the opening of the factory grille shell. You need mark and drill six holes. Place the screw to the holes on the front of the grille. Be sure the screws are through the OEM grille shell.	
4	Secure billet grille using the speed clip from the back side of the OEM grille shell.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!