



# PATENT PRODUCT

## Grille Installation Instruction


Rev. 20230301


<b>Part#</b>	C75200T&H	<b>Application</b>	For 2018-2021 Chevy Equinox
--------------	-----------	--------------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Mesh Grille	1	Stainless Steel	#4	Washers	2	Φ 25x φ 5x1
	#2	Studs	6	#6x1.5"-32	#5	Flat Tabs	2	
	#3	Hex Flange Nuts	6	#6				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the mesh grilles against the OEM grille shell, center and mark (2) holes for drilling as shown. Remove grille and drill holes according to your marks.	
4	Thread a Stud in each nut welded to the grille. From the rear, place a Tab/Washer on each Stud. Now thread a Hex Flange Nut on each Stud.	

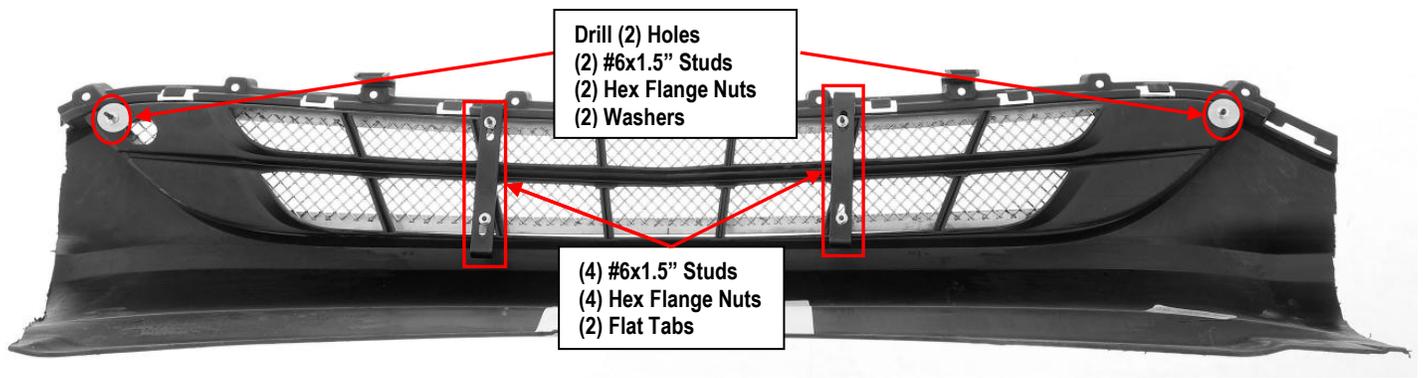

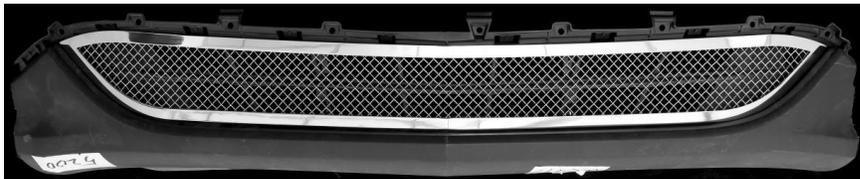5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!