

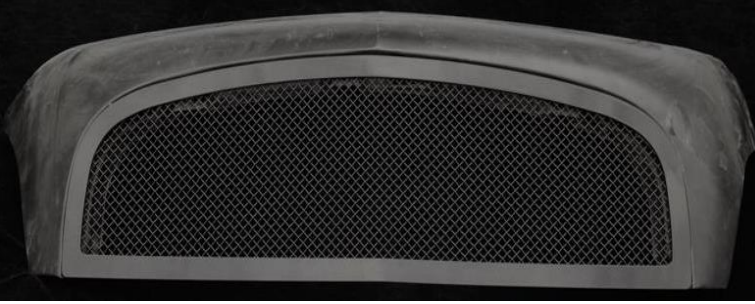
Part#	GR03GEB12T&H	Application	For 2006-2011 Chevy HHR
-------	--------------	-------------	-------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Lock Nut	5	10-24
	2	Stud	3	10-24x 1 1/2"	5	Washer	5	/
	3	Stud	2	10-24x 3/4"	6	/	/	/

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille/front panel) from vehicle. Then remove the five 10mm retaining nuts from the rear of the grille shell. Pull the grille shell forward and remove from the hood.	
3	Secure the stud to the threaded holes on the rear of the grille. Make sure the three longer studs are on top and the two shorter ones are at the bottom.	
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	
5	Secure grille using washers and lock nuts from the back of the OEM grille shell.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GEB12T&H	Application	For 2006-2011 Chevy HHR
6	Make sure the grille is centered and tighten the fasteners.		
7	Installation completed.		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!