

PATENT PRODUCT


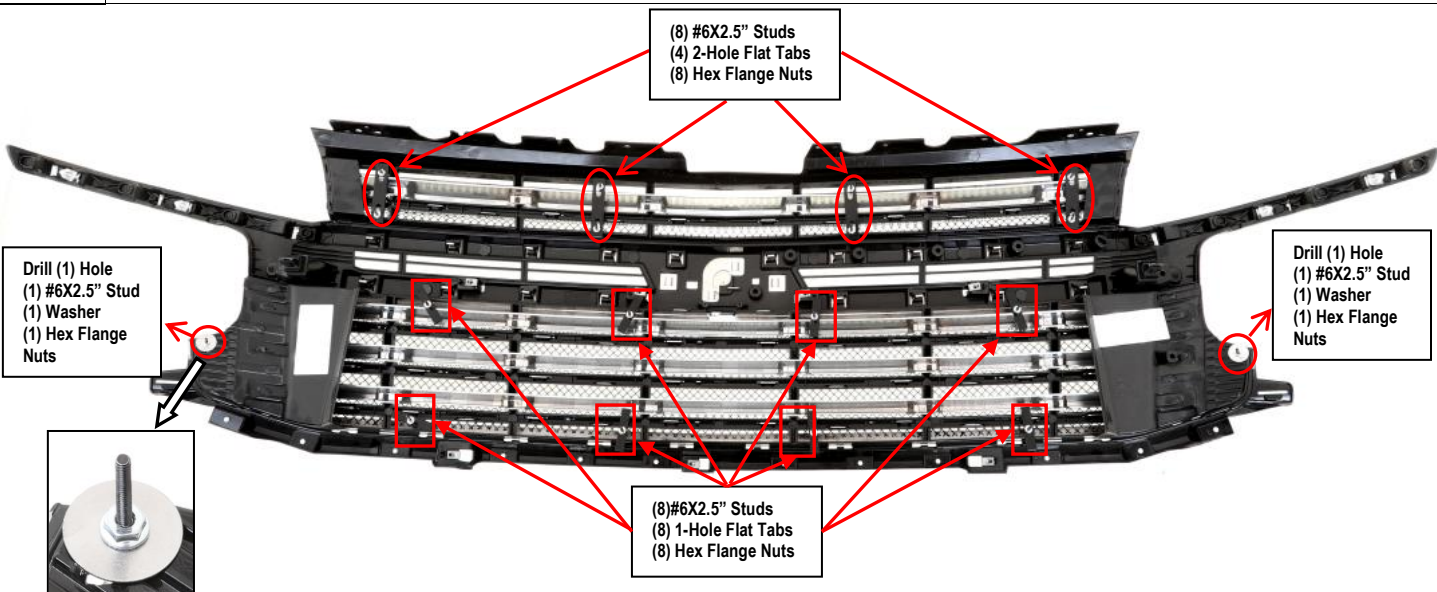
Grille Installation Instruction

Rev. 20221201

Part#	C75277T&H	Application	For 2021-UP Chevy Tahoe LS & Z71
--------------	-----------	--------------------	----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Mesh Grille	2	Stainless Steel	#4	2-Hole Flat Tabs	4	
	#2	Studs	18	#6x2.5"-32	#5	1-Hole Flat Tabs	8	
	#3	Hex Flange Nuts	18	#6-32	#6	Washers	2	φ 25x φ 5x1

Install Notes: Overlay ☒ Replacement ☐ Drill ☒ Cut ☐

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the mesh grille against the OEM grille shell, center and mark (2) holes for drilling. Remove grille and drill holes according to your mark.	
4	Thread a Stud in each nut welded to the grille. From the rear, place a Tab on each Stud. Now thread a Hex Flange Nut on each Stud.	
5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



PATENT PRODUCT

Grille Installation Instruction

Rev. 20221201

Part#	C75277T&H	Application	For 2021-UP Chevy Tahoe LS & Z71
--------------	-----------	--------------------	----------------------------------

7	Installation completed.	
---	-------------------------	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!