


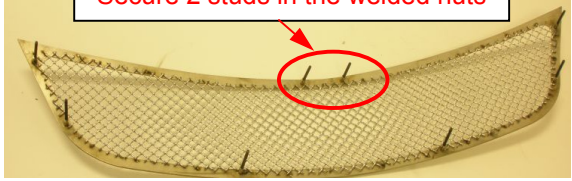
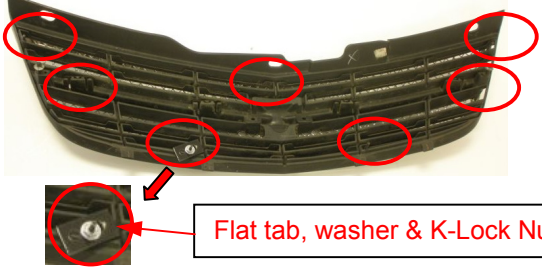

Part#	GR03GEG41T	2000-2005 Chevy Impala Main Upper
--------------	------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille insert	1	Stainless steel	4	Flat Tabs	8	/
	2	Thread stud	8	6-32X1 1/2"	5	washer	8	6#
	3	K-Lock Nut	8	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille insert & hardware with parts list.	N/A
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle by removing the bolts/plastic rivets as shown.	
3	Remove the OEM grille from vehicle.	
4	Remove the chrome shell and emblem from the OEM grille.	
5	Secure 6 studs into the welded nuts on the rear of the mesh grille insert as shown.	
6	Center the mesh grille insert onto the OEM grille. Be sure the 6 studs are through the OEM grille shell.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GEG41T	2000-2005 Chevy Impala Main Upper
7	Mark & drill 2 holes on the OEM grille for the center welded nuts on top of the grille, as shown.	 <p data-bbox="906 555 1345 633">Drill 2 holes on OEM grille as per the position of the welded nuts.</p>
8	Remove the mesh grille insert from the OEM grille, and secure the 2 studs into the center welded nuts, as shown.	 <p data-bbox="906 672 1345 723">Secure 2 studs in the welded nuts</p>
9	Center the mesh grille insert onto the OEM grille shell again. Make sure 8 studs are through the OEM grille shell. And then, fasten the mesh grille insert onto the OEM grille with flat tabs, washers & K-Lock Nuts.	 <p data-bbox="1066 1104 1461 1155">Flat tab, washer & K-Lock Nut</p>
10	Re-install the OEM grille to the bumper with mesh grille insert.	N/A
11	Reinstall the black plastic cover which was removed in step 2.	N/A
12	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!