
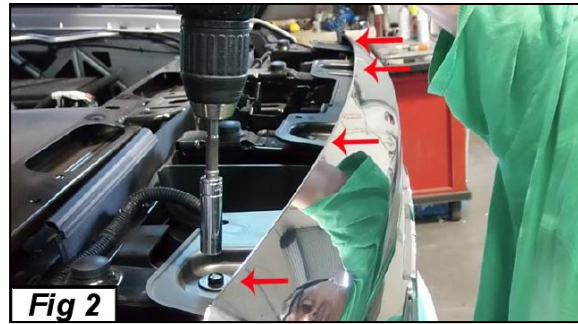


|       |              |             |   |
|-------|--------------|-------------|---|
| Part# | GR03GEI50T/H | Application | For 2014-2015 Chevy Silverado 1500 Main Upper |
|-------|--------------|-------------|---|


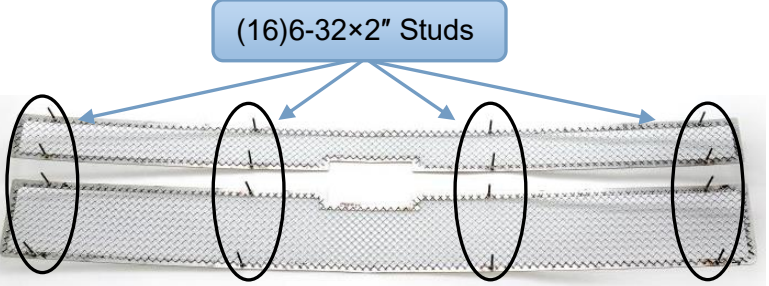



| Parts List | Item | Part Name   | QTY | Description     | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------|-----|-------------|
|            | 1    | Mesh Grille | 2   | Stainless steel | 3    | Lock Nut  | 16  | 6-32        |
|            | 2    | Stud        | 16  | 6-32x 2"        | 4    | Flat Tab  | 16  | /           |

Install Notes: Overlay  Replacement  Drill  Cut

| Step | Description  | illustration   |
|------|--|--|
| 1    | Identify the grille & hardware with parts list.  |  |
| 2    | <b>Optional(steps 2-6):</b> Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1) |  |
| 3    | Remove the four 10mm upper bolts securing the factory grille shell to the radiator support. (Fig 2)  |  |
| 4    | Remove the four 10mm upper bolts securing the lower section of the factory grille assembly. Two are located in the middle and once bolt on each opposite corner.(Fig 3)  |  |
| 5    | Remove the two 7mm bolts securing the lower section of the factory grille assembly to the front fender. Two are located in the middle and once bolt on each opposite corner. Repeat on opposite side. (Fig 4)  |  |



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| Part# | GR03GEI50T/H  | Application   | For 2014-2015 Chevy Silverado 1500 Main Upper |
|-------|---|---|---|
| 6     | <p>The front grille assembly can now be removed from the vehicle. With the help of an assistant on the opposite side gently tilt the grille assembly up while pulling away from the vehicle at the same time. The assembly is held in place by compression clips. You can now carefully place the grille face side down for the installation of you grille. (Fig 5)</p> |  <p><b>Fig 5</b></p>  |   |
| 7     | <p>Secure the stud to the threaded holes on the rear of the grille.</p>   |  <p>(16)6-32x2" Studs</p>   |   |
| 8     | <p>Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.</p>  |   |   |
| 9     | <p>Secure grille using the lock nuts and flat tabs from the back side of the OEM grille shell.</p>  |   <p>(16)Flat Tabs<br/>(16)Lock Nuts</p> |   |
| 10    | <p>Make sure the grille is centered and tighten the fasteners.</p>  |   |   |
| 11    | <p>Installation completed!!!</p>  |   |   |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!