
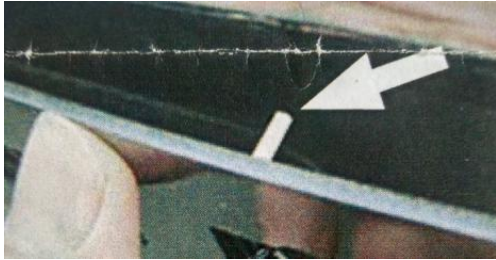



Part#	GR03GEI90T	Application	2014-2015 Chevy Silverado 1500 Lower Bumper
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Black Fender Washers	2	
	2	Nylon Lock Nuts	2	6-32	4	stud	2	6-32×2"

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Test fit the mesh grille in the factory bumper opening. On the backside of the mesh grille are two threaded studs. Note where they make contact with the plastic in the factory bumper opening and mark the point of contact.	
	Now drill a 1/4 " hole through the plastic in the factory bumper opening where you made the contact marks. Now insert the mesh grille into the factory bumper opening with the threaded studs on the mesh grille going through the holes that you just drilled.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	From underneath the vehicle reach up behind the mesh grille and locate the two threaded studs protruding through the plastic. You may need to unclip the rubber splash guard on the bottom of the vehicle to reach the threaded studs. Place the black washers and nylon lock nuts on the threaded studs and tighten the lock nuts.	
6	Replace the clips on the splash guard if you removed them.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!