



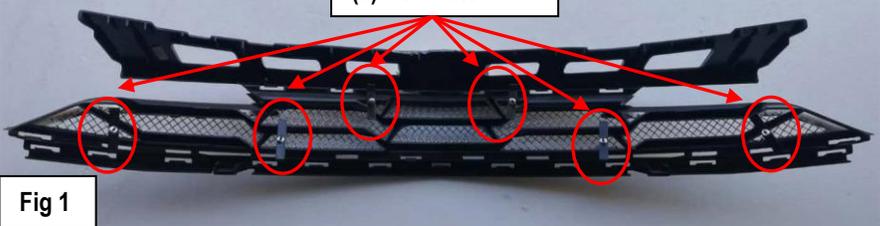
PATENT PRODUCT Grille Installation Instruction

Rev. 20200401

| | | | |
|--------------|-----------|--------------------|------------------------------------|
| Part# | C75091T&H | Application | For 2019-2020 Chevy Camaro 1SS/2SS |
|--------------|-----------|--------------------|------------------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------|-----|------------------|
| | 1 | Mesh Grille | 1 | Stainless Steel | 3 | Hex Nuts | 6 | 6-32 Flange Nuts |
| | 2 | Studs | 6 | 6-32×2" | 4 | Tabs | 6 | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual. | |
| 3 | Thread a stud in each nut welded to the grille. From the rear, place a tab on each screw. Now thread a nut and a washer on each stud. (Fig 1 & 2) | <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> <p>(6) Studs (6) 2-Hole Tabs (6) Hex Nuts</p> </div>    |
| 4 | Make sure the insert is centered and tighten the hardware. | |
| 5 | Reinstall the plastic shroud with the fasteners removed in Step 2. | |
| 6 | Installation completed. | |

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!