



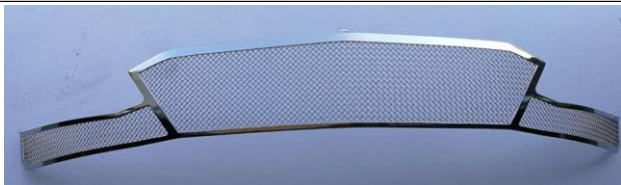
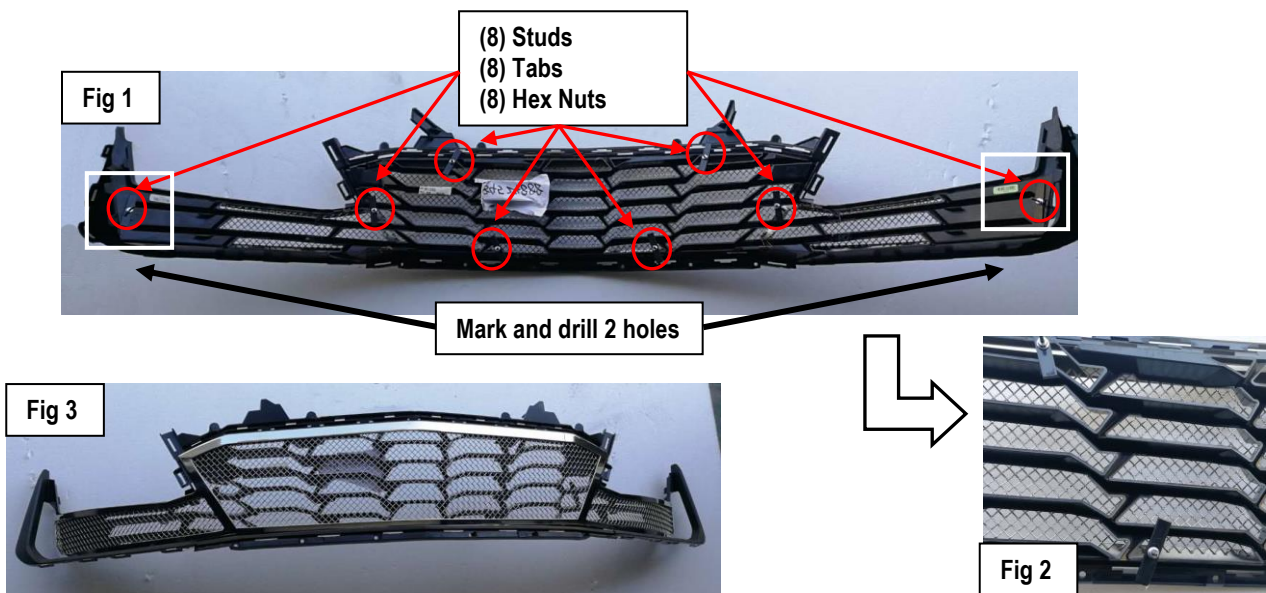
PATENT PRODUCT Grille Installation Instruction

Rev. 20200401

Part#	C75094T&H	Application	For 2019-2020 Chevy Camaro 1SS/2SS
--------------	-----------	--------------------	------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless Steel	3	Hex Nuts	8	6-32 Flange Nuts
	2	Studs	8	6-32×2"	4	Tabs	8	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the billet grille against the OEM grille shell, center and mark holes for drilling. Remove billet grille and drill holes according to your mark.(Fig 1)	
4	Thread a stud in each nut welded to the grille. From the rear, place a tab on each screw. Now thread a nut and a washer on each stud.(Fig 1 & 2)	
5	Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!