




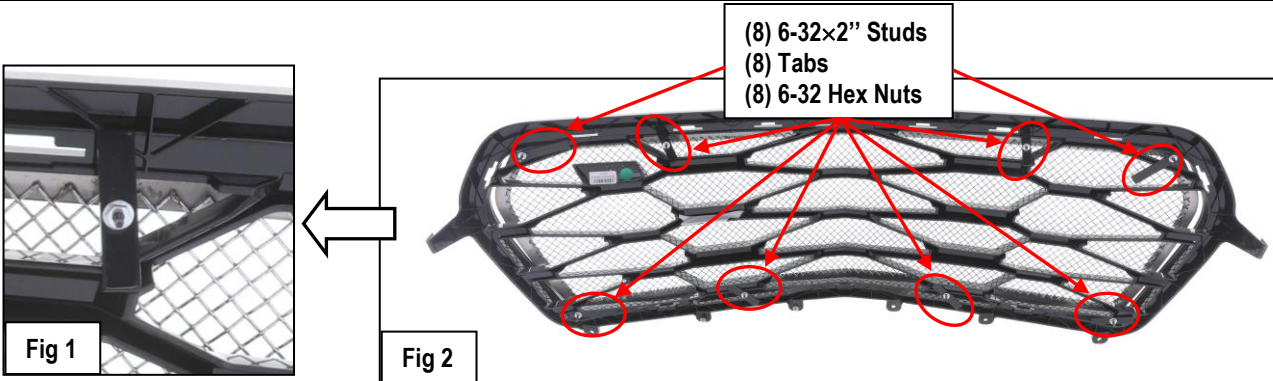

PATENT PRODUCT Grille Installation Instruction

Rev. 20200501

Part#	C75095T&H	Application	For 2019-UP Chevy Camaro ZL1
--------------	-----------	--------------------	------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Mesh Grille	1	Stainless Steel	#3	Hex Nuts	8	6-32 Flange Lock Nuts
	#2	Studs	8	6-32x2"	#4	Tabs	8	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Thread a stud in each nut welded to the grille. From the rear, place a tab on each stud. Now thread a hex nut on each stud. (Fig 1 & 2)	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> <p>(8) 6-32x2" Studs (8) Tabs (8) 6-32 Hex Nuts</p> </div> 
4	Make sure the insert is centered and tighten the hardware.	
5	Reinstall the plastic shroud with the fasteners removed in Step 2.	
6	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!