



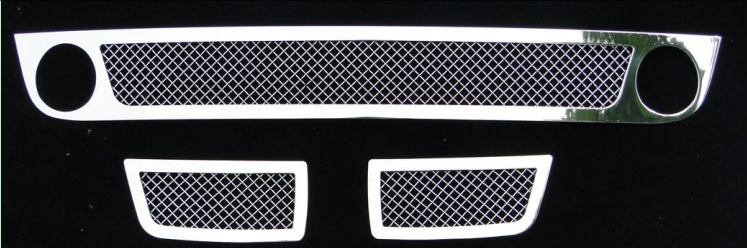
Grille Installation Instruction

Rev. 150116

Part#	GR03GFD69T	Application	06-09 Chevy Trailblazer SS Main Upper
-------	------------	-------------	---------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Screws	11	6# -32×2"
	2	L Brackets	11		5	Washers	11	
	3	Flange Nuts	11	6-32				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Thread a stud in each nut welded to the grille.Center the bumper grille in place; mark a hole for the corner mounting studs(on each end).Drill two 3/16" mounting holes and reinsert overlay(1). From the back of the bumper;install a flat washer and nylon lock nut on each stud. Install a L bracket, flat washer and nylon lock nut on centedr stud along the top (2);then install one on each remaining lower stud. Center the grille;tighten the hardware	
4	Test fit the side vents in place;recenter one side. From the rear of the bumper, use three L brackets, flat washers and nylon lock nuts to secure in place(3).Make sure the L brackets wrap around the factory mesh inserts. Check alignment and tighten hardware. Repeat process for opposite side.	
5	Make sure the grille is centered and tighten the fasteners.but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!